

 


# Wireless Kinetic Door Bell

## 21459/05

Before using your new Brilliant Smart Kinetic Door Bell, it is important that you read and follow these instructions, even if you feel you are quite familiar with this type of product. Retain this document for future reference.

### Operating and Installation Instructions Wireless Kinetic Door Bell:

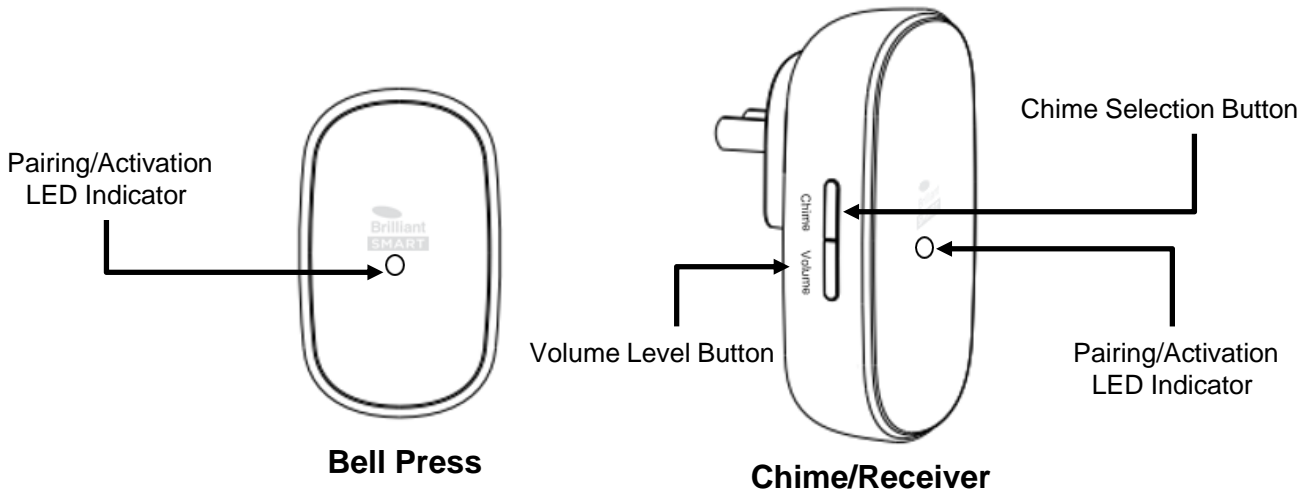

### Specifications:

\*Note: Image's may differ from actual product.

Model: 21459/05

Colour: White

Power: Bell Press - Kinetic - Self Generated (no Batteries Required)

Chime/Receiver – 240VAC 50Hz

Working Temperature: 5°~40°C

Volume Levels: 4 + Silent Mode

Noise Level: 80db at 1 meter

Chimes: 38

Operating Range: Upto 30 meters (depending local conditions\*\*)

Radio Frequency: 433MHz

### Warning:

- Chime/Receiver not designed for outdoor use.
- Failure to follow these instructions may result in damages to device and will void warranty.
- This Product has no Serviceable parts.
- Do not perform unauthorised modification to this device and or components.
- If product is functioning irregularly, please TURN OFF the power, remove from power outlet and contact Manufacturer
- \*\*Local conditions may interfere with range of frequency – i.e. metal framed building, brick wall, etc.



# Wireless Kinetic Door Bell

 
## 21459/05

---

## Installation

### Bell Press:

To be placed at a suitable location preferably out of weather.  
Attach the transmitter with enclosed double sided self adhesive tape and position on wall or door. (Note: Do not attach to metal door or wall as this may interfere with RF signal).

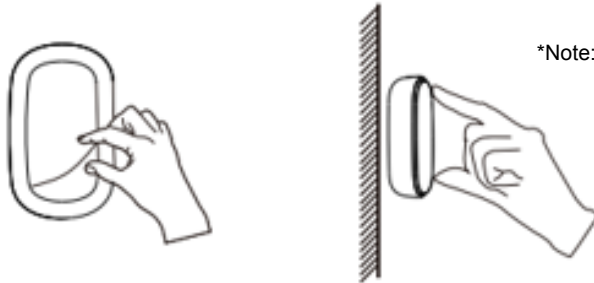

\*Note: Image's may differ from actual product.

### Chime/Receiver:

 
To be installed indoors only (Note: not for outdoor use. Do not install in wet areas.  
– i.e. kitchen, bathroom)  
Plug the receiver into a suitable 240VAC power socket and turn on.  
Once powered on and activated, the receiver will chime once with factory set chime and LED indicator will flash.

### Chime Selection:

To select a different chime, press the Chime Selection Button once at a time to select your desired chime. There are 38 different chimes to choose.  
(Note: you can only move forward in the selection).

### Volume Level:

The receiver has 4 volume levels. Press the Volume Level Button once at a time to select desired volume level.

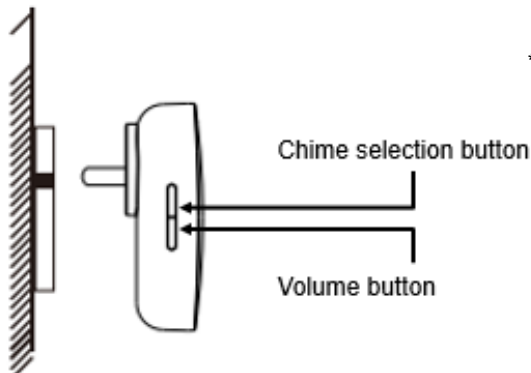

\*Note: Image's may differ from actual product.



# Wireless Kinetic Door Bell

## 21459/05

### Silent Mode:

 
**Activate Silent mode:** long press Chime Selection Button for 8 seconds and release when LED indicator light on Chime/Receiver stops flashing and stays constantly on.

**De-activate Silent mode:** long press Chime Selection Button for 8 seconds and release when LED indicator light on Chime/Receiver stops flashing and stays constantly on.


### Pairing:

The Bell Press and Chime/Receiver are already paired.

If more than one Bell Press or Chime/Receivers are required to be paired, please follow the below steps

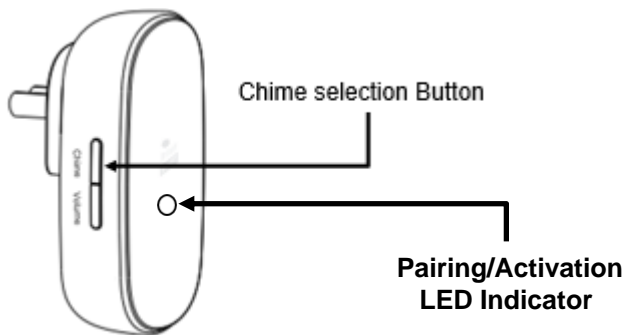

 1. Long-press the Chime Selection Button for 3 seconds and release when the LED indicator light starts Flashing.

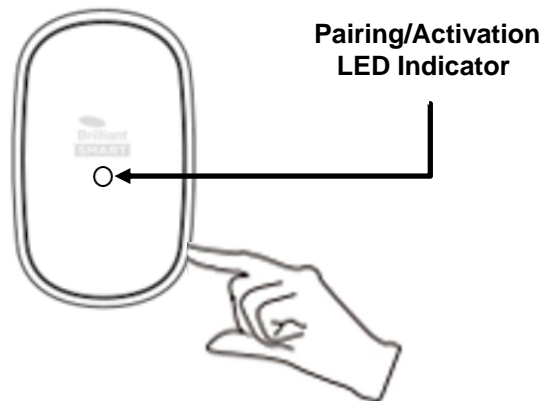

2. Press the Bell Press once, the LED indicator light on the Chime/Receiver will go Off, and the pairing will be complete

\*Note: Image's may differ from actual product.

### Removing Paired Device:

Pairing will be deleted by pressing the Chime Selection Button for 10 seconds until the LED indicator light stops Flashing and stays constantly On.



# Wireless Kinetic Door Bell

## 21459/05

---

### Warranty:

Brilliant Lighting warrants this product against defects in manufacture and workmanship for a period of 1 year from date of purchase. For products used in non-domestic or commercial applications, Brilliant Lighting warrants this product for a period of 3 months from date of purchase. This warranty is only valid for products installed by a qualified electrical contractor and operated within the guidelines specified by Brilliant Lighting, and within the correct operating voltage ranges as stated on the product's rating label.

Warranty does not include damage or loss arising from incorrect installation, operation or maintenance of this product, damage caused through modification, incorrect installation, service by unqualified or unauthorised personnel or lack of regular maintenance and cleaning. Proof of installation by qualified personnel may be required, eg. Electrical Safety Certificate. Proof of purchase must be supplied with all warranty claims.

This warranty is provided in addition to any other rights and remedies of the customer under any law. In applications not intended for household, personal or domestic use, liability is limited to replacement or reimbursement of product only.

*Our goods come with guarantees that can not be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if goods fail to be acceptable quality and the failure does not amount to a major failure.*

Any claim under this warranty must be made within 5 year of the date of purchase of the product. To make a claim under the warranty, take the product (with proof of purchase – receipt or similar) to the store where you purchased the product or contact Brilliant Lighting at the address below.

This warranty is given by:

**Brilliant Lighting (Aust)Pty. Ltd.**  
**ABN 37 006 203 694**  
**956 Stud Road Rowville, VIC 3178**  
**Phone: 03 9765 2555**  
**Email: [warranty@brilliantlighting.com.au](mailto:warranty@brilliantlighting.com.au)**  
**MADE IN CHINA**