①Bedboard

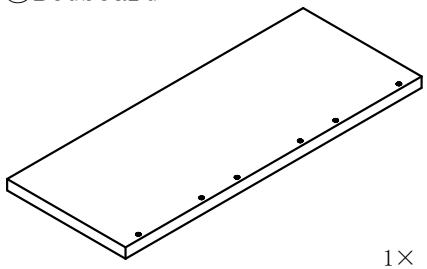

1×

②Middle bedboard

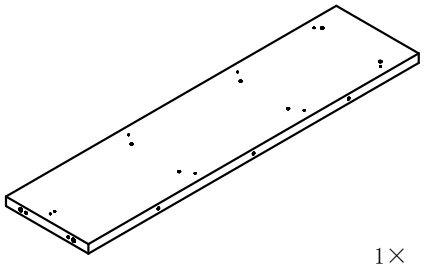

1×

③Left and right bedboards

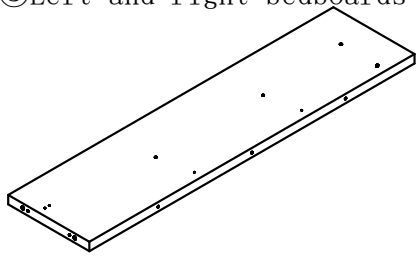

2×

④Base frame side panel

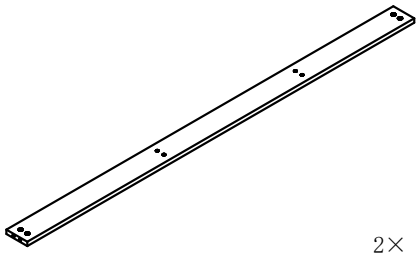

2×

⑤Base frame back panel

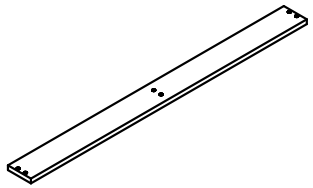

1×

⑥Base frame front panel

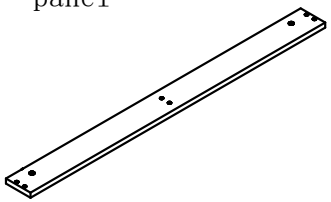

1×

⑦Bottom frame interplate

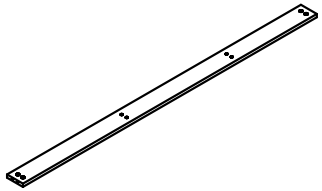

1×

⑧Bottom frame partition

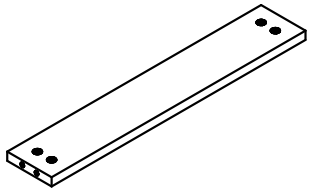

4×

⑨Wood Strip



6×

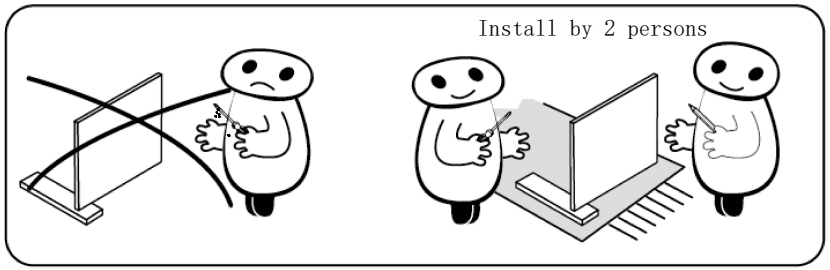

Step 1

Attention:First of all, put a piece of carton or rug on the floor,and then begin to install the panels, so as to prevent the parts from scratch

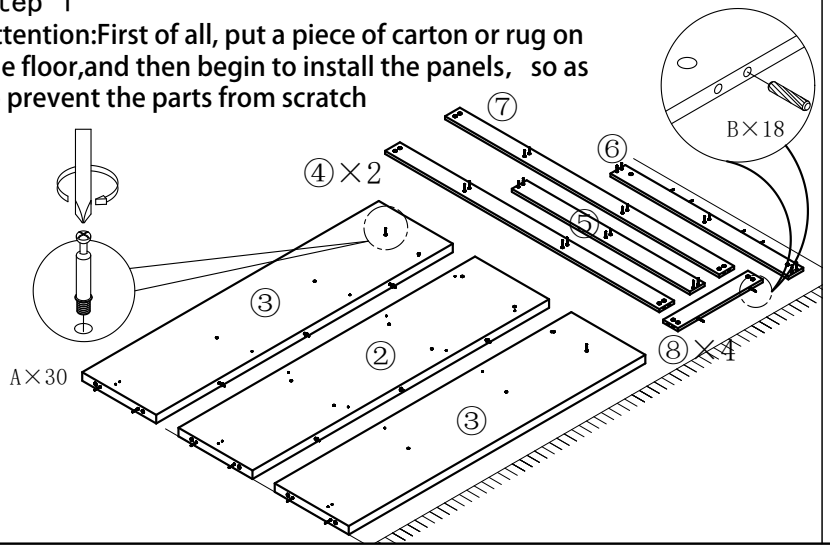

Step 2

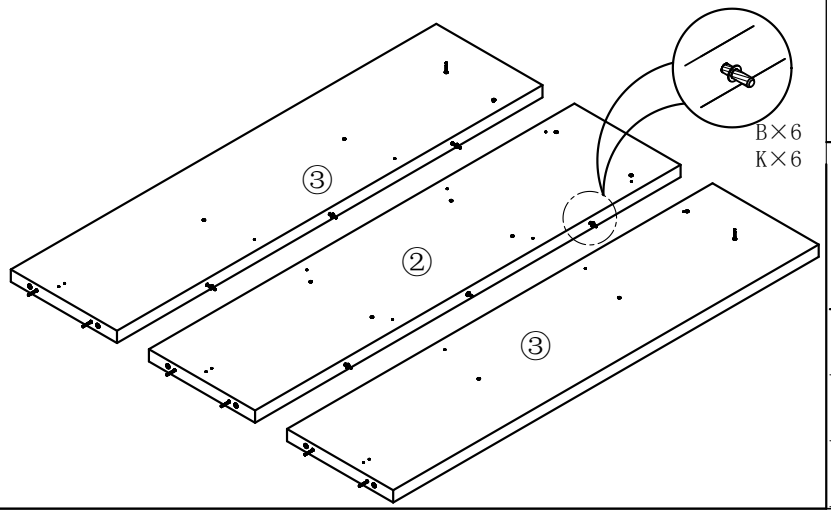

A. Cam pin



30+1×

B. Dowel



24×

C. Cam lock

30+1×

D. Bolt

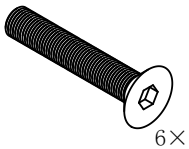

6×

E. Spanner

1×

F. Cam cover



30×

G. Screwdriver



1×

H. Middle corner

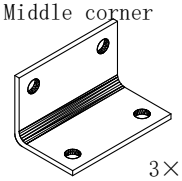

3×

I. Wood screw



24+1×

J. Big corner

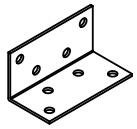

2×

K. Gasket



6+1×

L. Screw



24+1×

Model	M-QYT-39
Name	Bed
Size	1680W*2080D*703H

Step 3

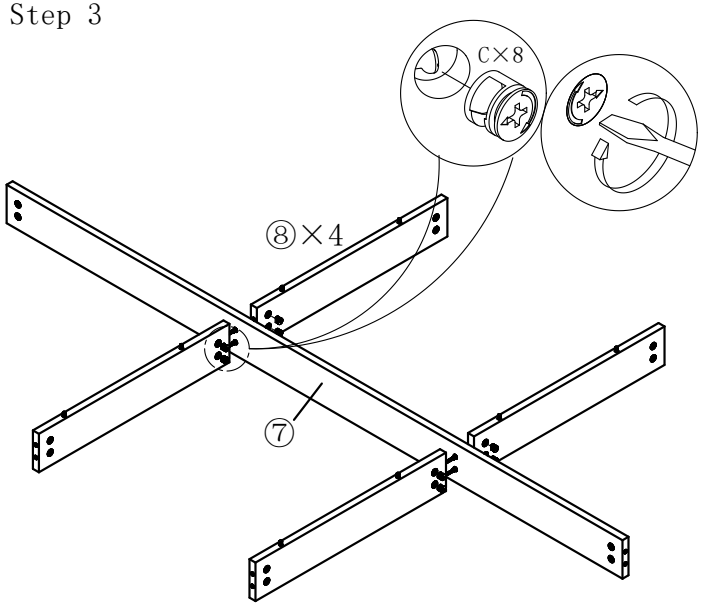

Step 4

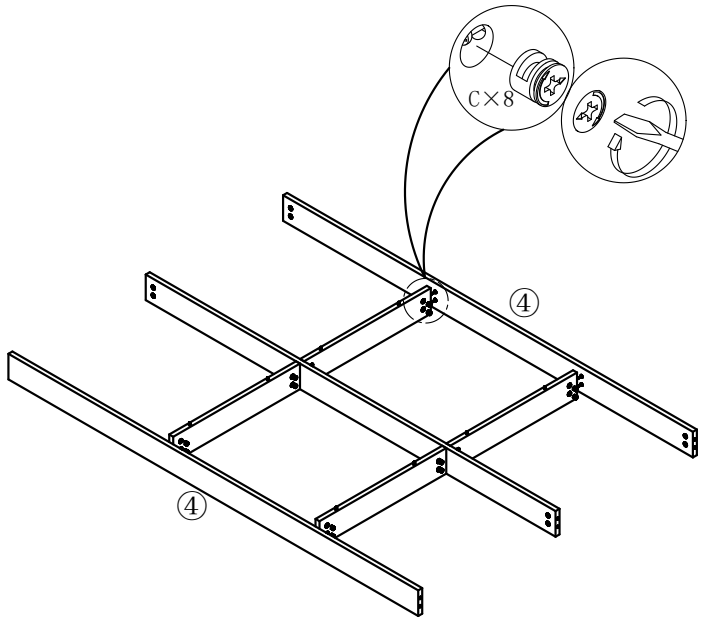

Step 5

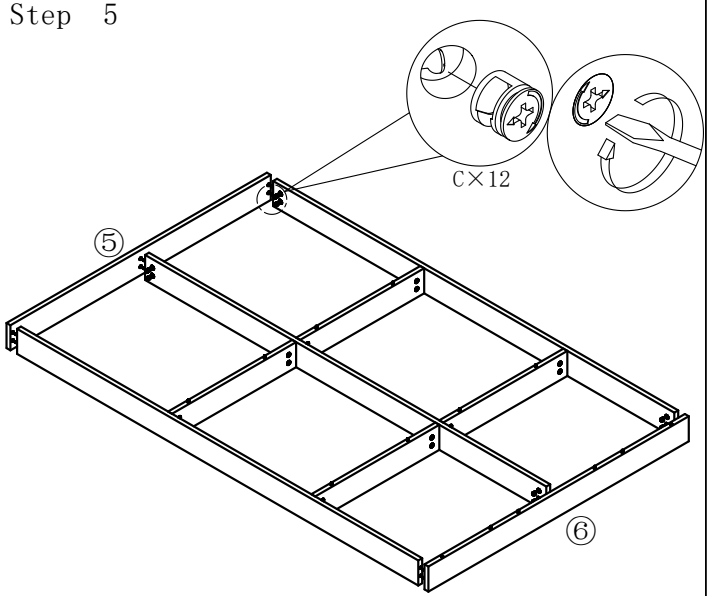

Step 6

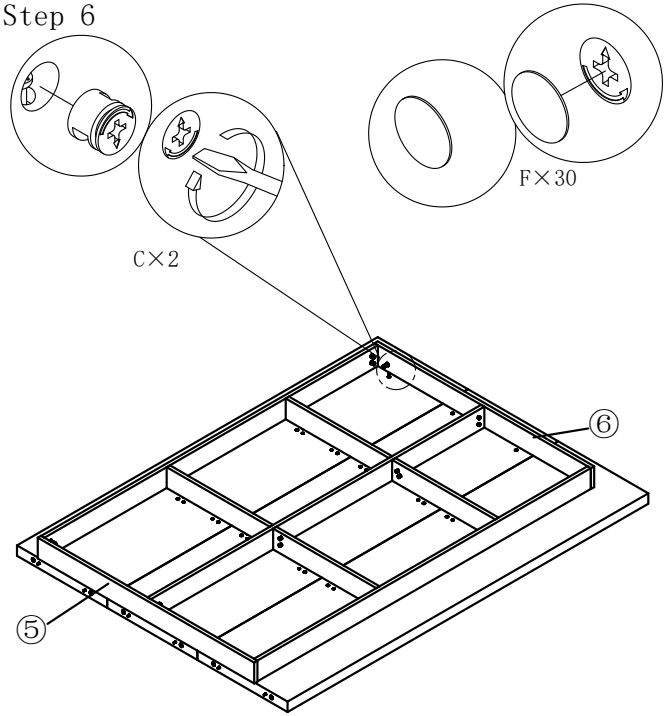

Step 7

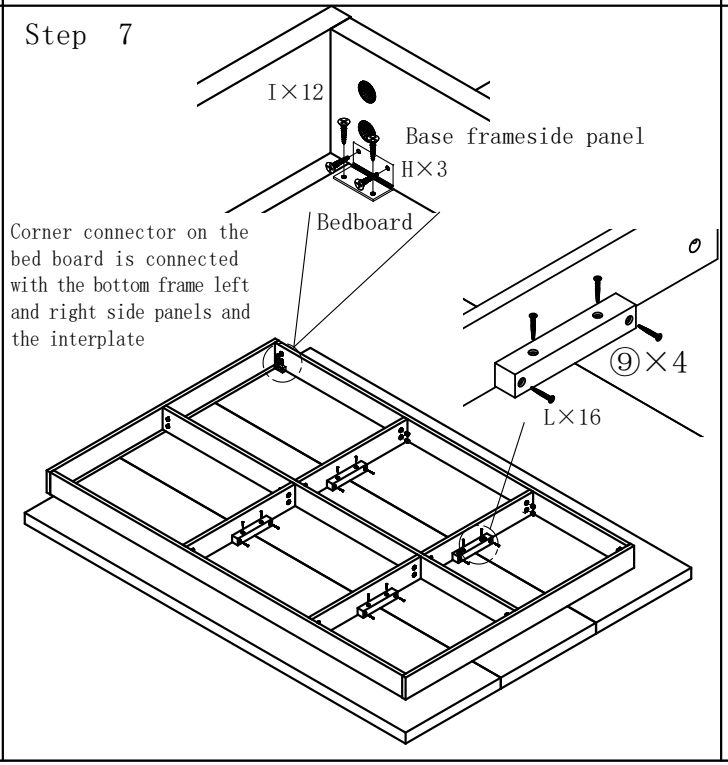

Step 8

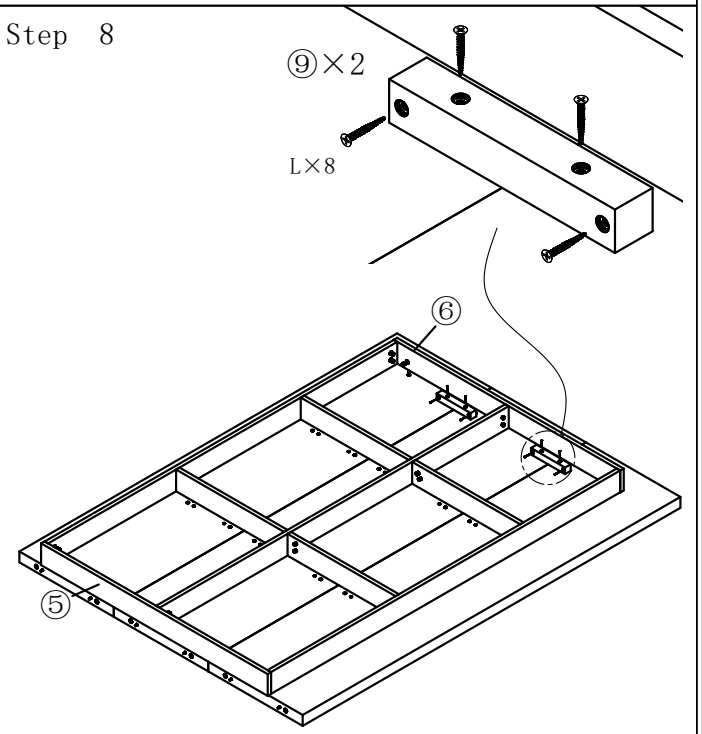

Step 9

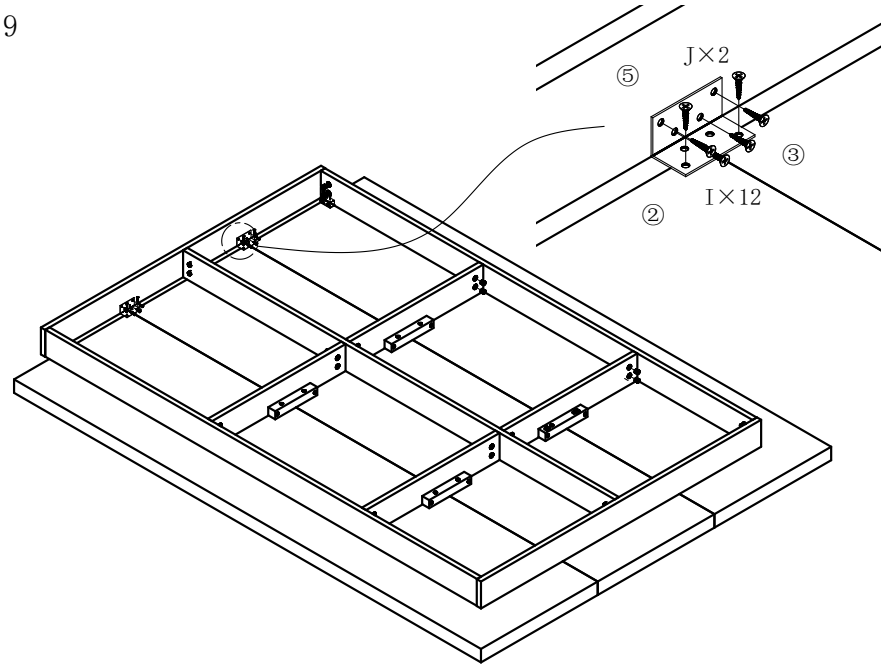

Step 10

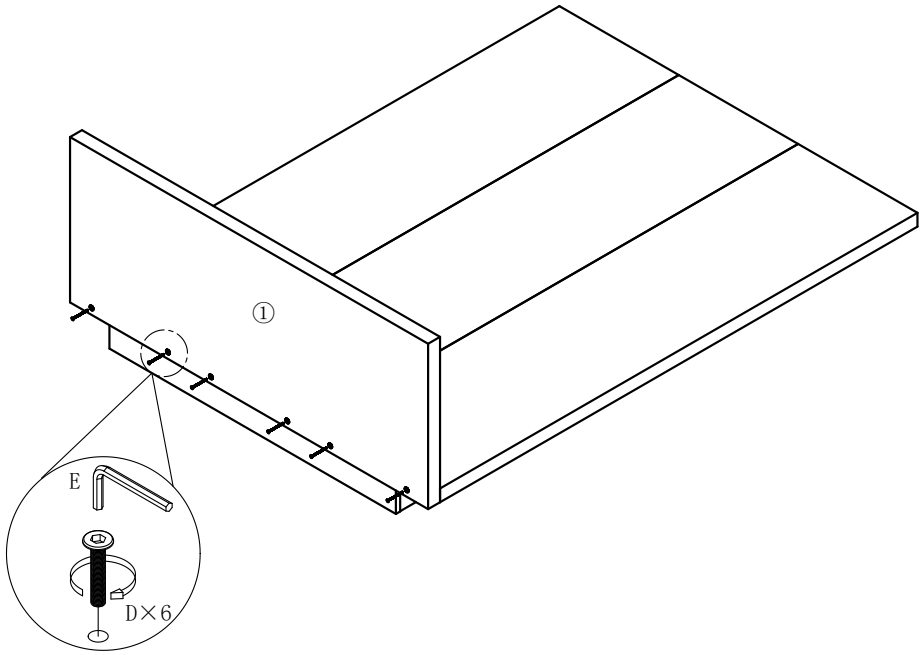
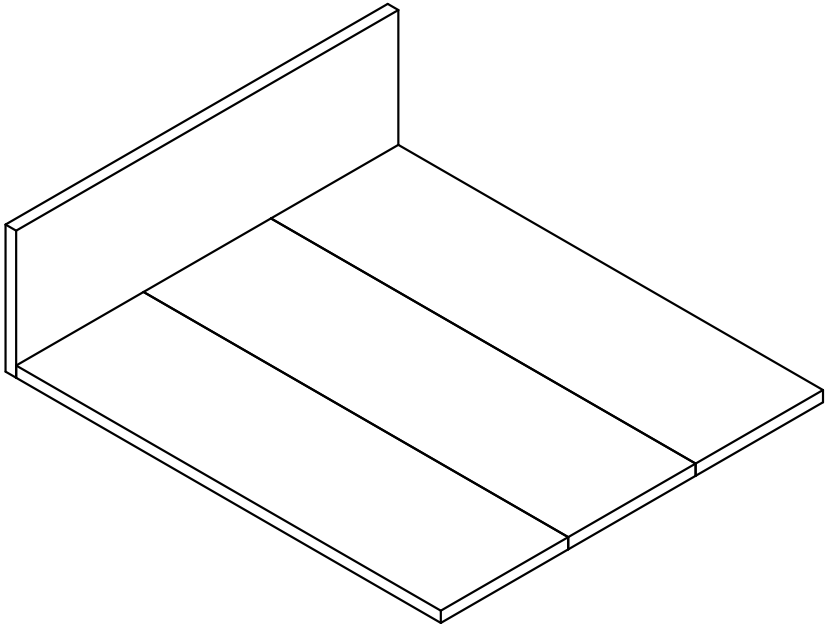
Step 11