LINSY 林氏家居

安装示意图/Assembly Instruction

产品名称 Model NO.	KQ7E-A
产品规格 Specification	720*350*363mm
安装工具 Tool	安装人数Installer

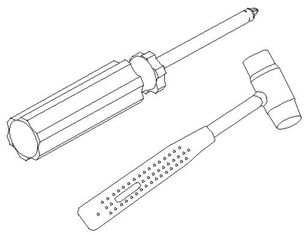

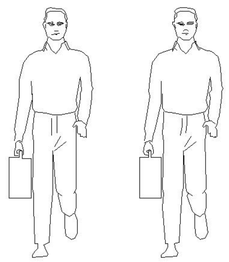

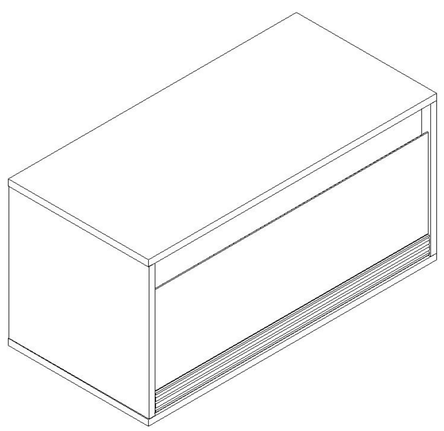

五金表/Hardware list

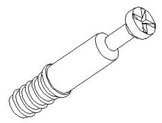

(A)*8
二合一螺杆
2-in-1-screw

(B)*8
大三合一锁饼
3-in-1 large lock



(C)*8
木榫Ø8x30mm
Wood tenon



(D)*4
灰色毛毡垫
Foot pad

(E)*17
白攻螺丝M3.5*12mm
Tapping screw



(F)*9
白攻螺丝M3.5*16mm
Tapping screw



(G)*6
背板扣
White buckle

(H)*2
L型卡扣
L-shaped buckle

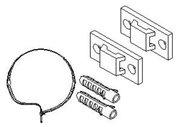

(I)*1
家具防倒器-白色
Anti-fall device

(J)*1
三节滚珠导轨10″
Three-section rail

(K)*6
塑料螺母
Plastic Nut



(L)*6
白攻螺丝M4*10mm
Tapping screw



(M)*6
小二合一杆
2-in-1 small rod



(N)*6
小三合一锁饼
3-in-1 small lock

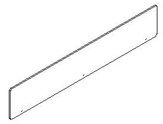

(O)*1
亚克力
Acrylic



(P)*3
镜钉
Mirror nail

部件表/Parts List

编号NO.	名称Name	规格(mm) Specification	数量QTY	材质Material
1	顶底板Top base board	720*350*15	2	三胺板 Melamine
2	侧板Side board	330*350*15	2	三胺板 Melamine
3	背板Back board	698*340*5	1	三胺板 Melamine
4	抽屉面板组立 Drawer panels assembly	684*265*18	1	三胺板+实木 Melamine+Wood
5	抽屉后板 Drawer's Back board	638*174*12	1	三胺板 Melamine
6	抽屉右侧板 Drawer's side board(R)	295*174*12	1	三胺板 Melamine
7	抽屉左侧板 Drawer's side board(L)	295*174*12	1	三胺板 Melamine
8	抽屉底板 Drawer's Bottom board	648*291*5	1	三胺板 Melamine
9	抽屉底托条 Drawer's bottom bracket	281*58*12	1	三胺板 Melamine
10				
11				
12				
13				
14				
15				
16				
17				
18				
19				
20				
21				
22				
23				
24				
25				

KQ7E-A

安装方法
Installation method

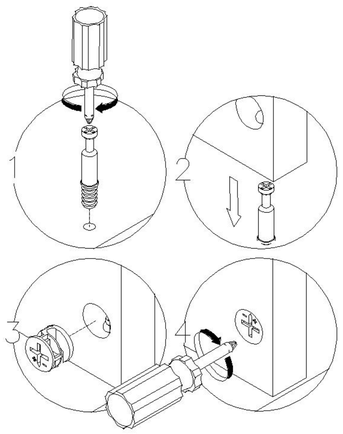

二合一 two-in-one

阀门开关(下压为开)
Valve switch(press down to open)



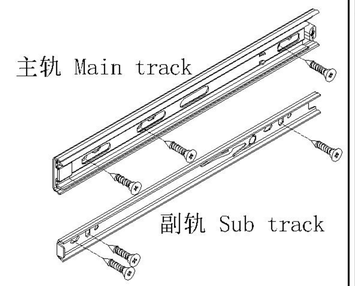

三节滚珠导轨-10″
Three-section rail

1

(M)*6

(N)*6

(L)*6

(K)*6

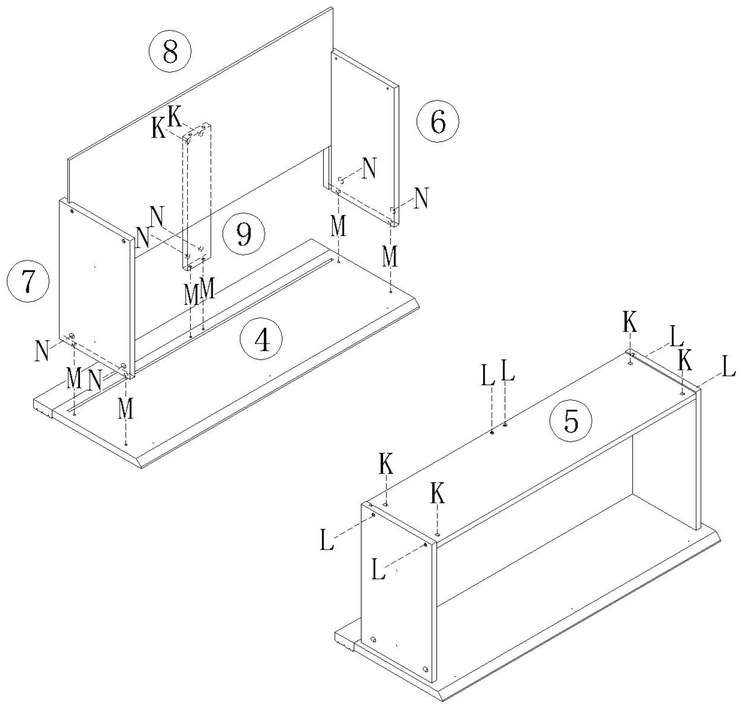

2


(E)*6

(F)*3

(J)*1

(0)*1

(P)*3

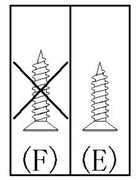

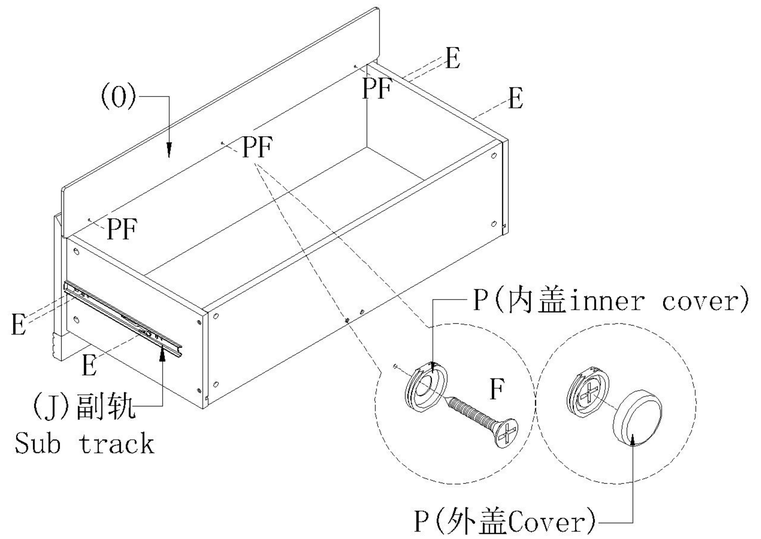

3

(A)*4

(B)*4

(C)*4

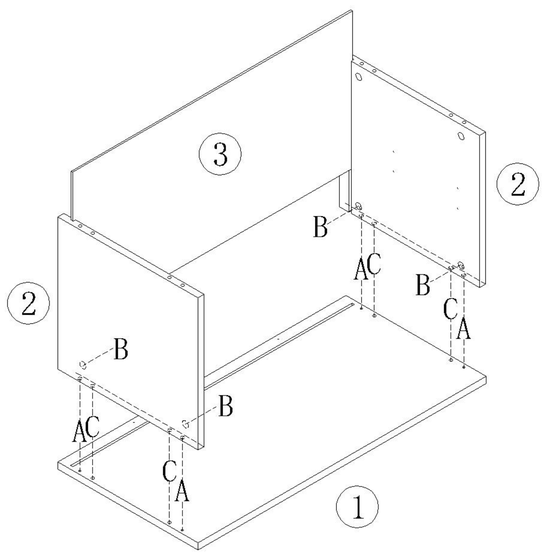

4

(A)*4

(B)*4

(C)*4

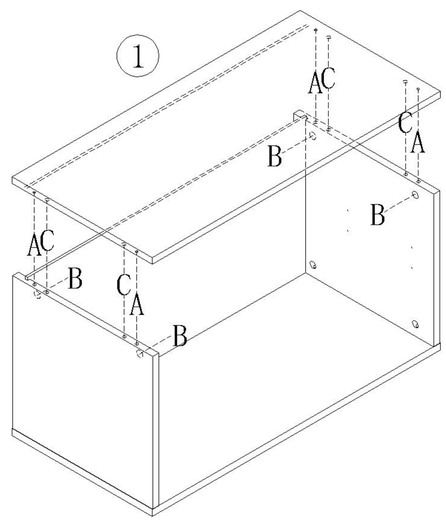

KQ7E-A

安装方法
Installation method

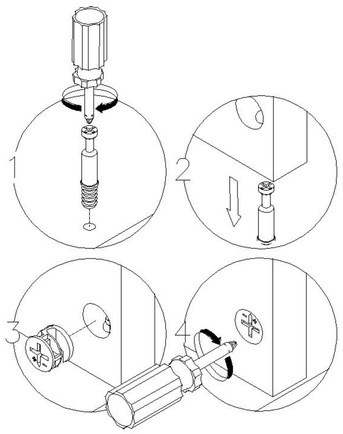

二合一 two-in-one

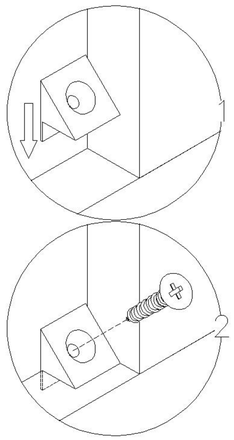

背板扣
Back Plate Buckle

阀门开关(下压为开)
Valve switch(press down to open)



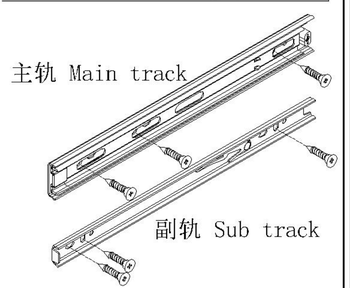

三节滚珠导轨-10″
Three-section rail

5

(E)*6

(J)*1

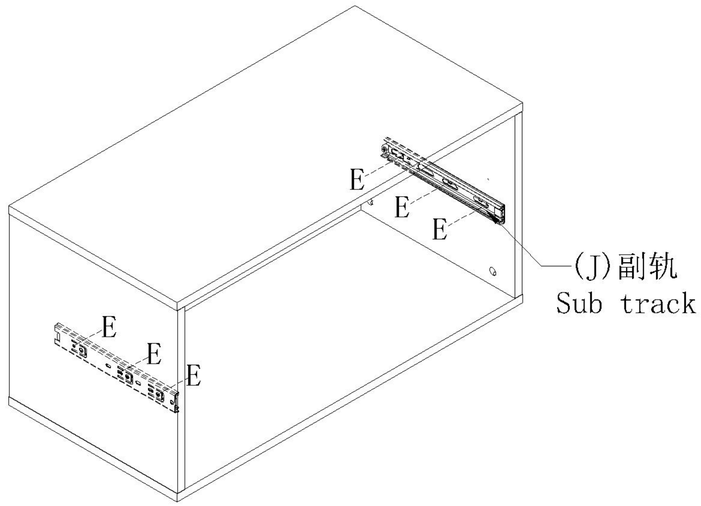

6

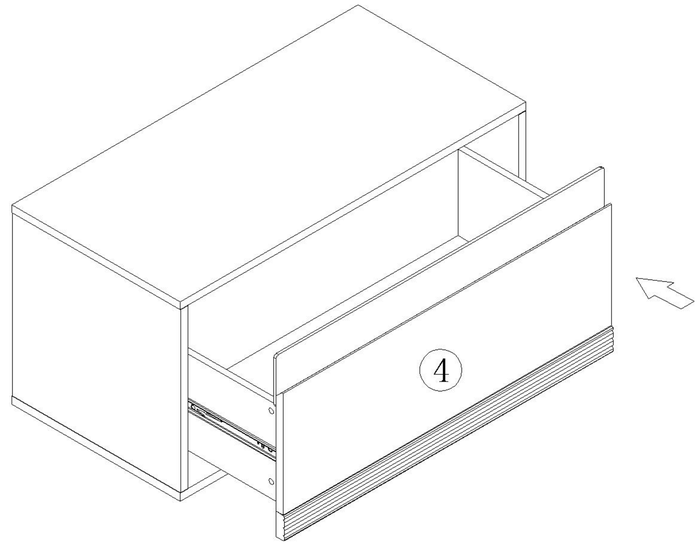

7

(F)*6

(G)*6

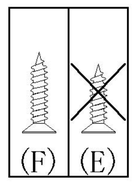

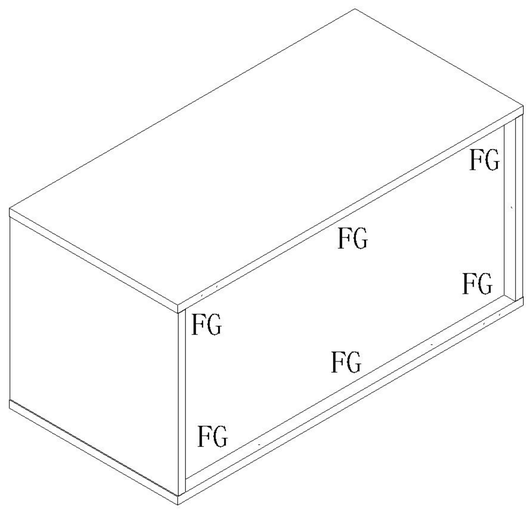

8

(D)*4

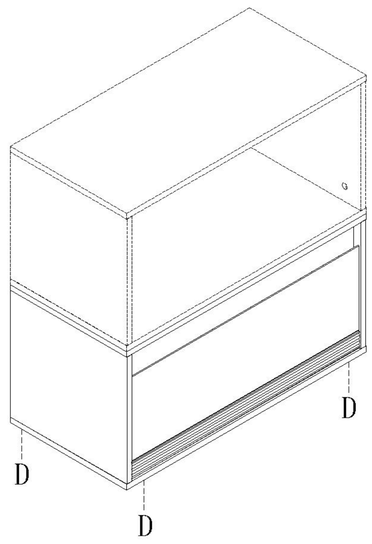

接触地面需安装五金(D)
Hardware installation required for contact with the ground (D)

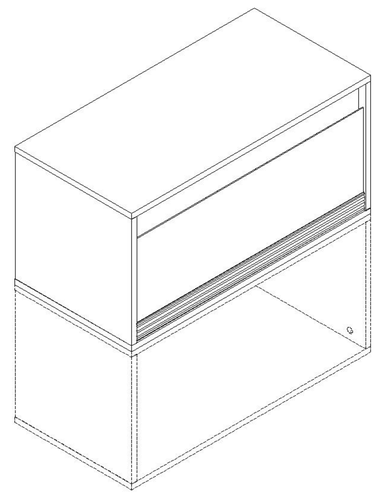

无接触地面不需安装五金(D)
No need to install hardware without touching the ground (D)

KQ7E-A

安装方法
Installation method

(E)*4

(H)*2

9

组合连接方式,如只购买单个柜体无需安装
Combination connection method, such as purchasing only a single cabinet without installation

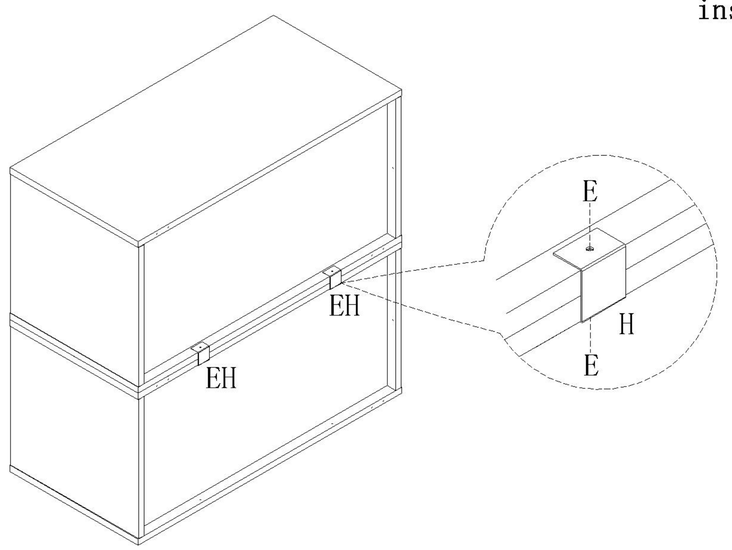

上下组合安装方式
Upper and lower combination installation method

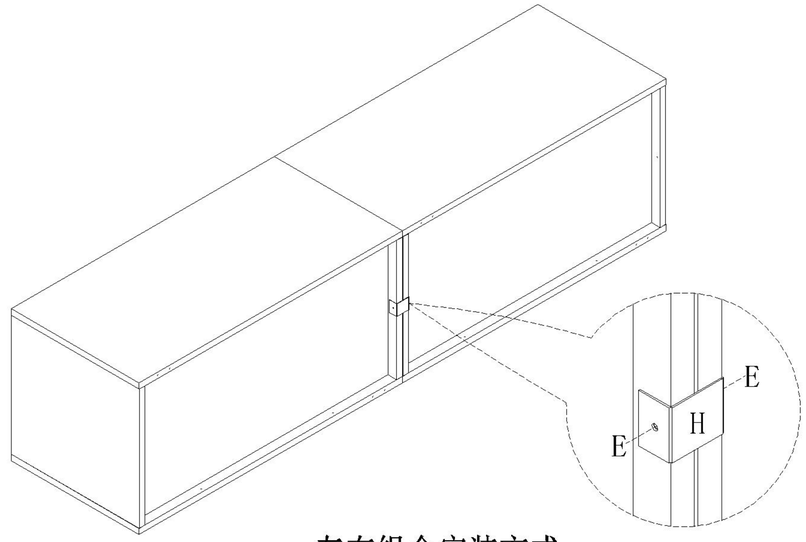

左右组合安装方式
Left and right combination installation method

(I)*1

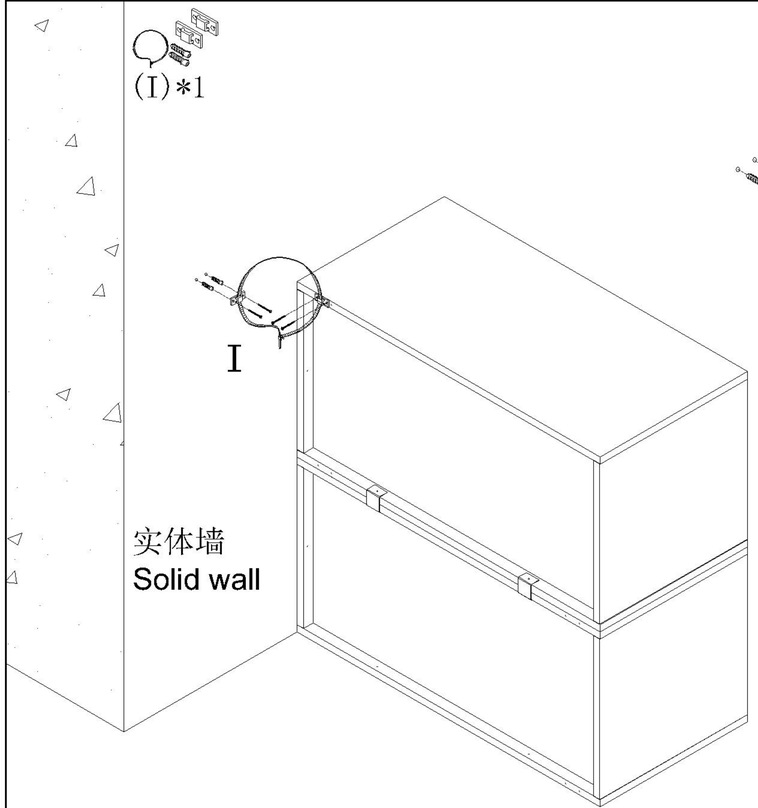

柜子组合高度超600MM
需安装上防倒器
Cabinet combination height exceeding 600MM requires installation of an anti fall device
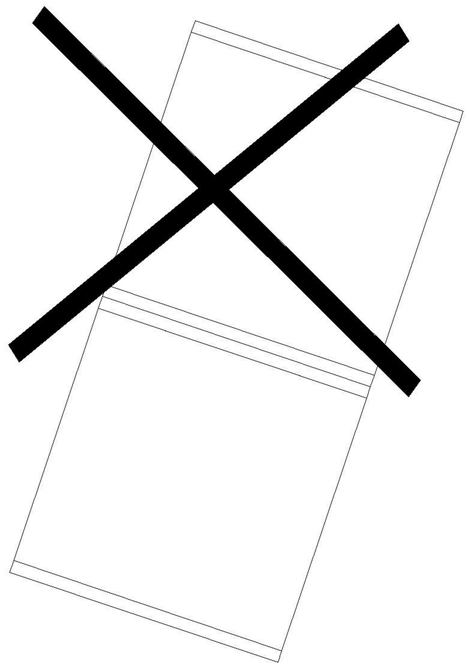
10