


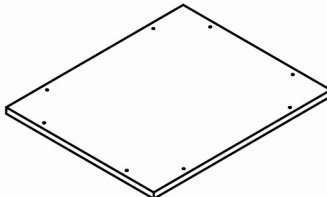
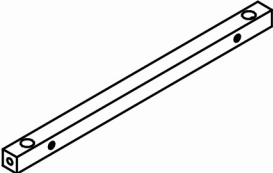
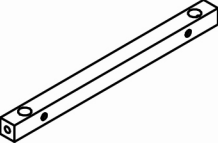
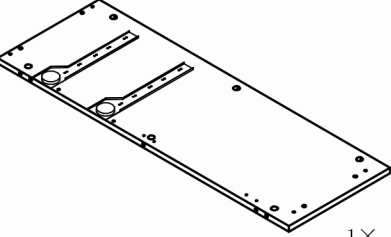


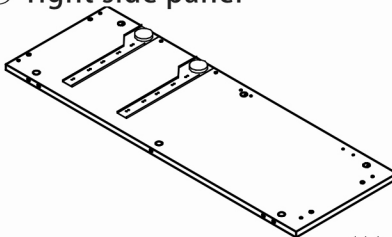
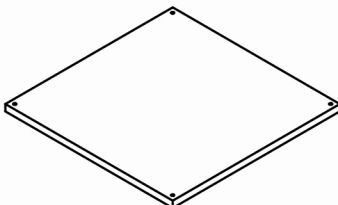
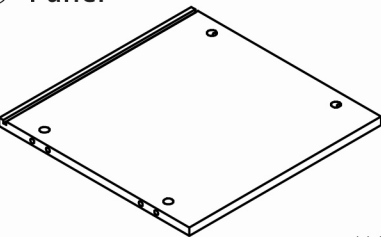
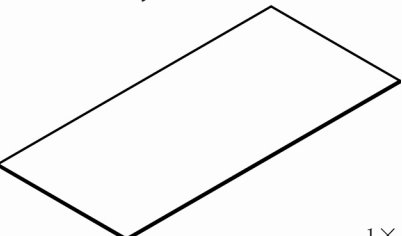
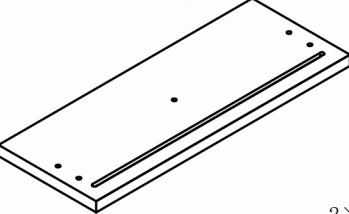
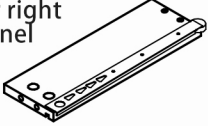
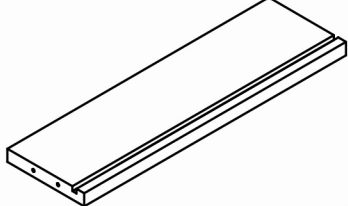
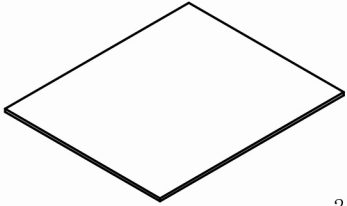
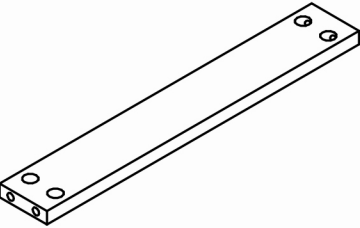

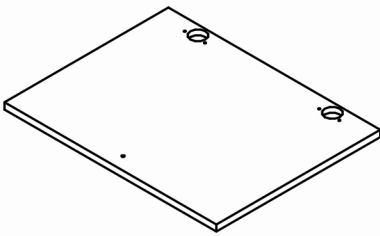
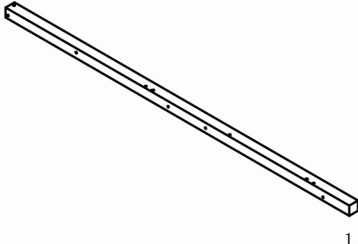

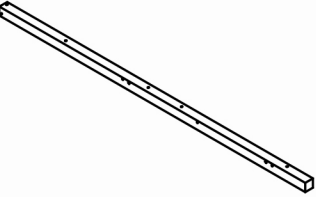
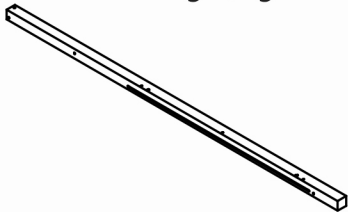
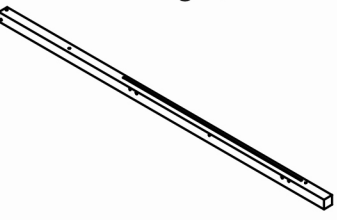
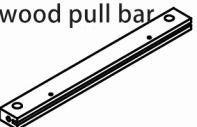

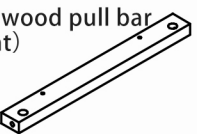

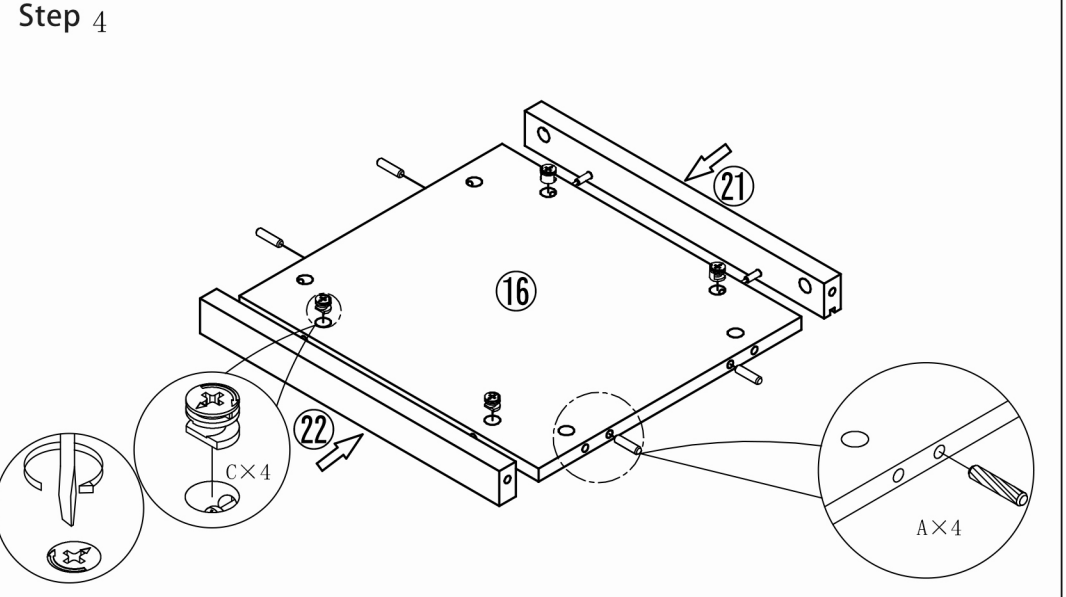
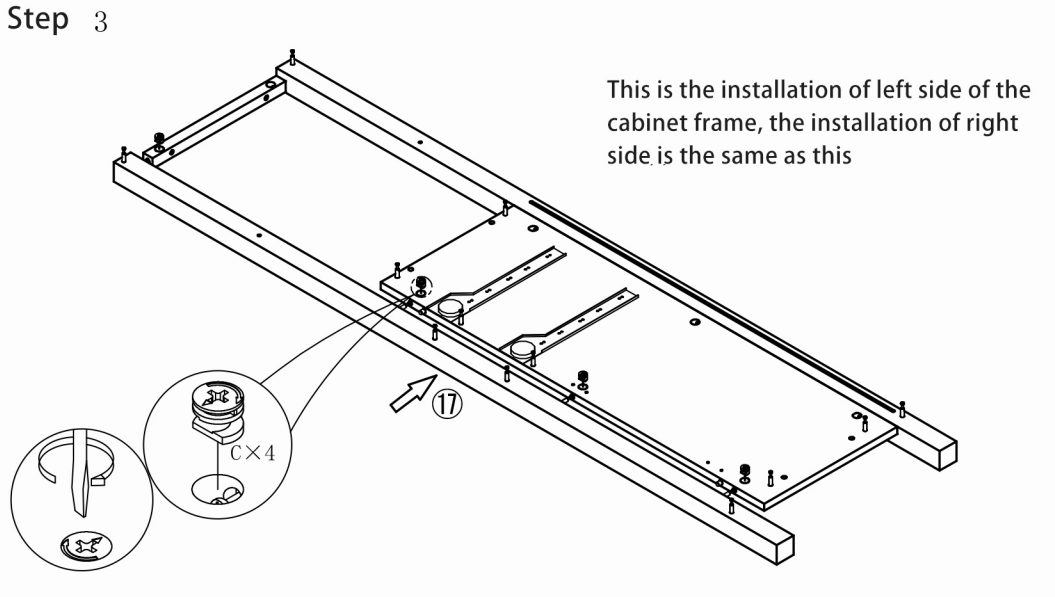
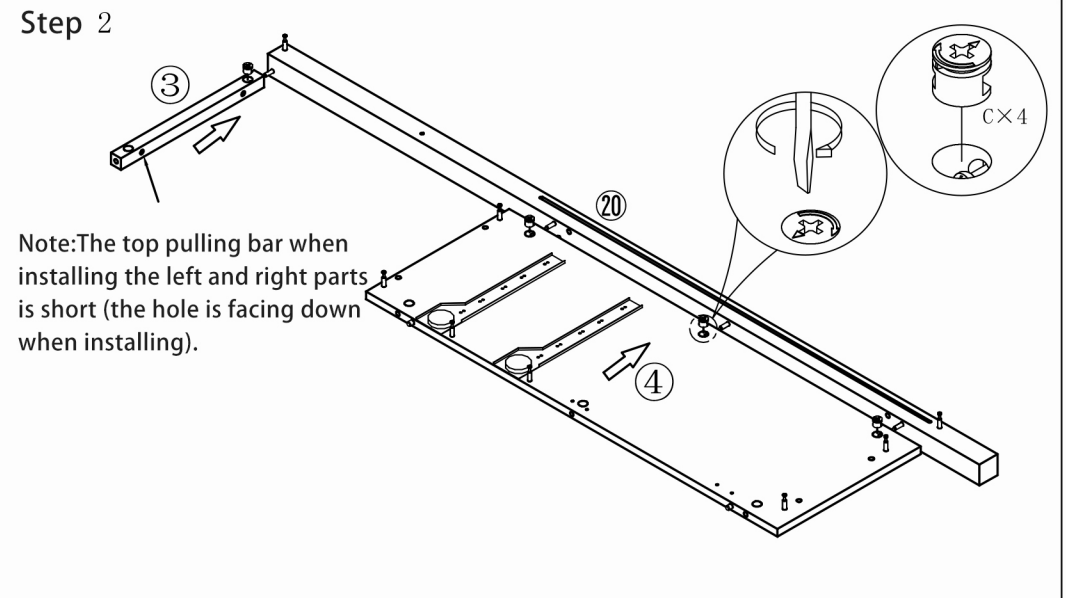
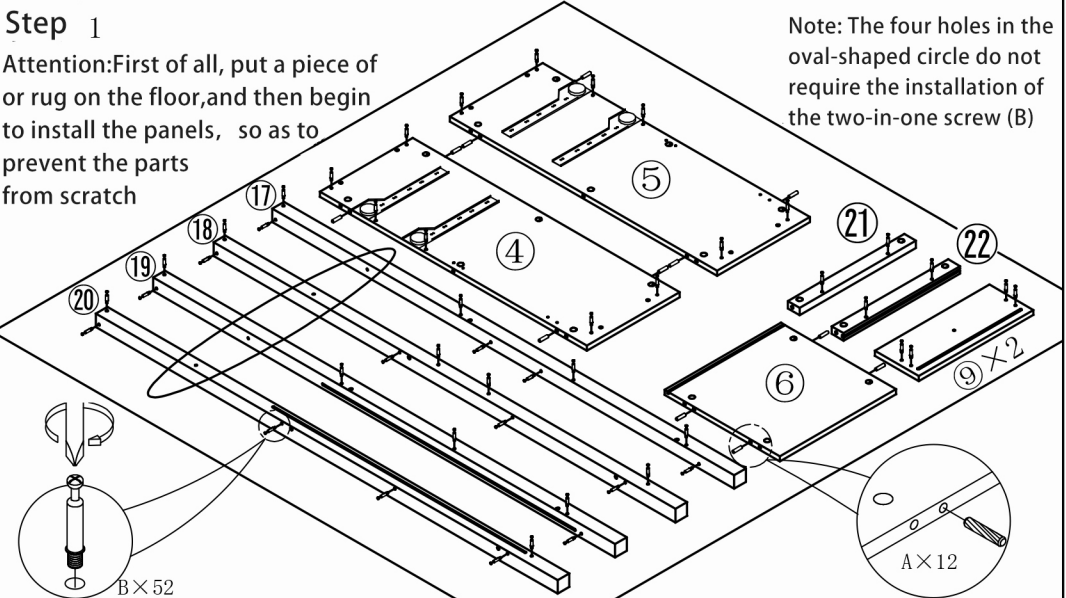
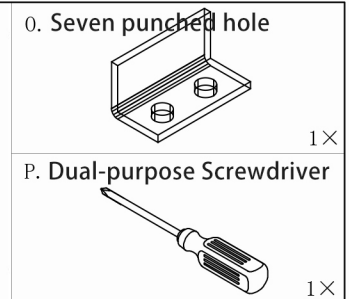
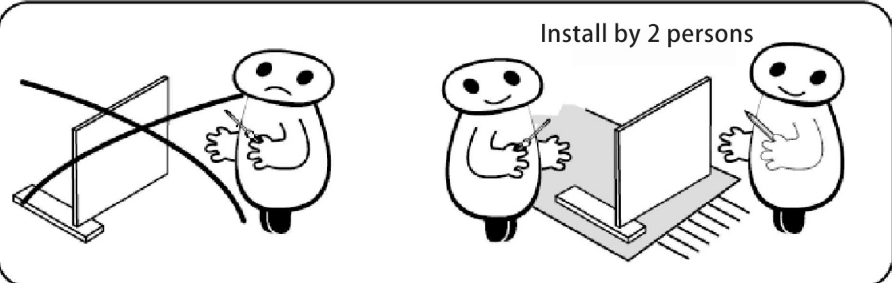
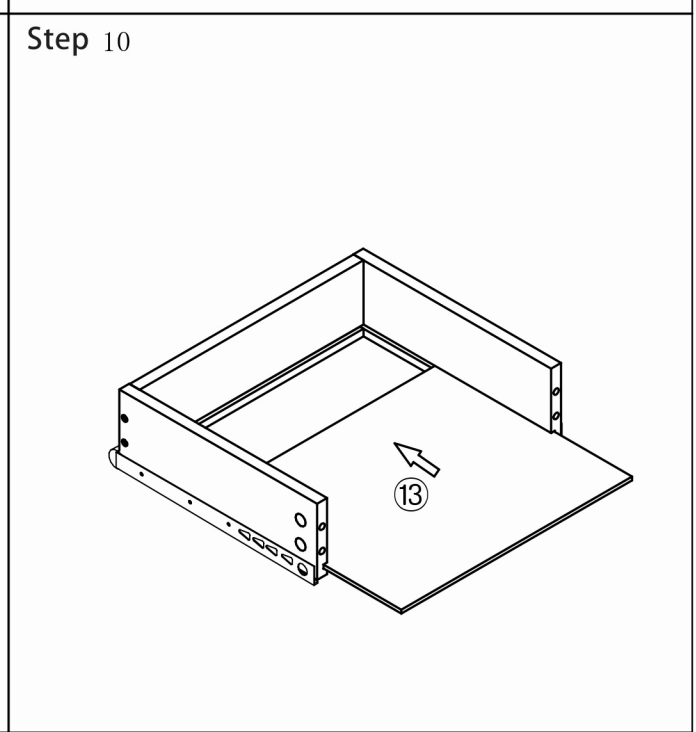
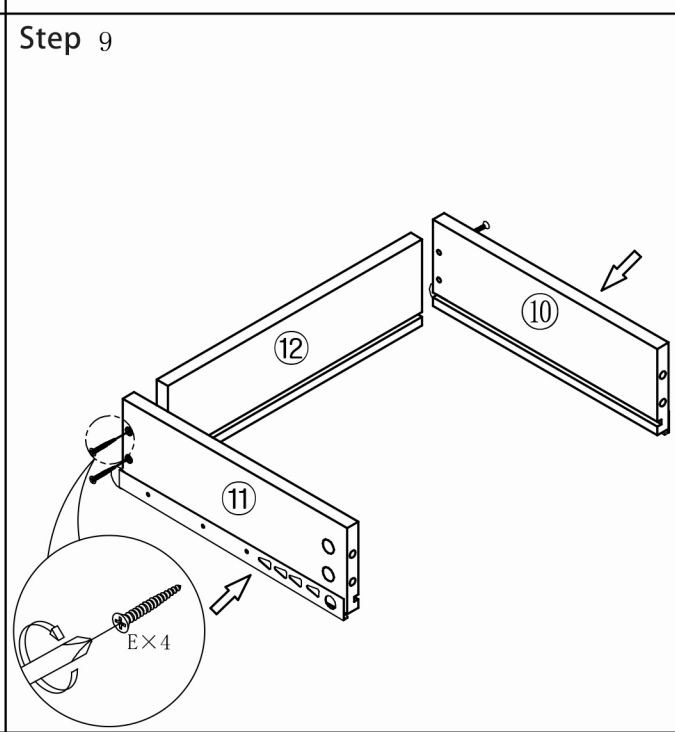
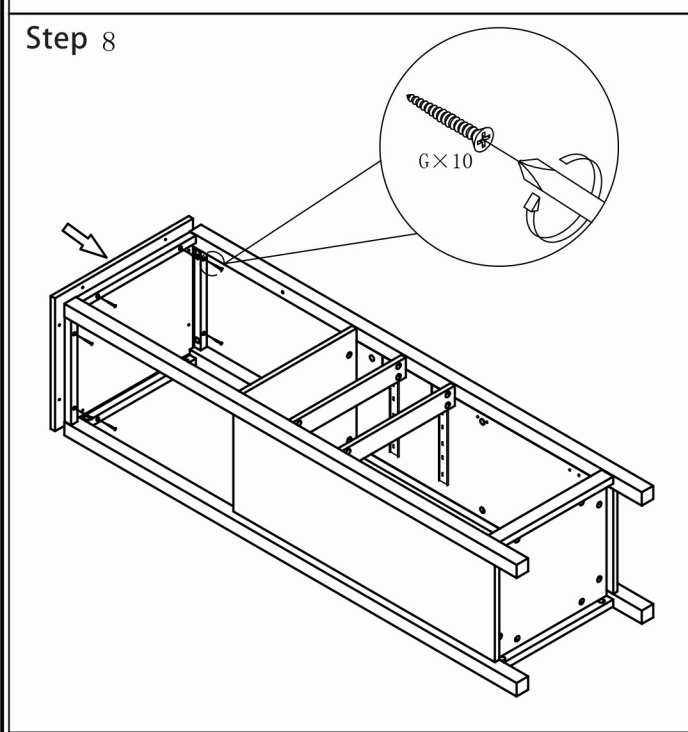
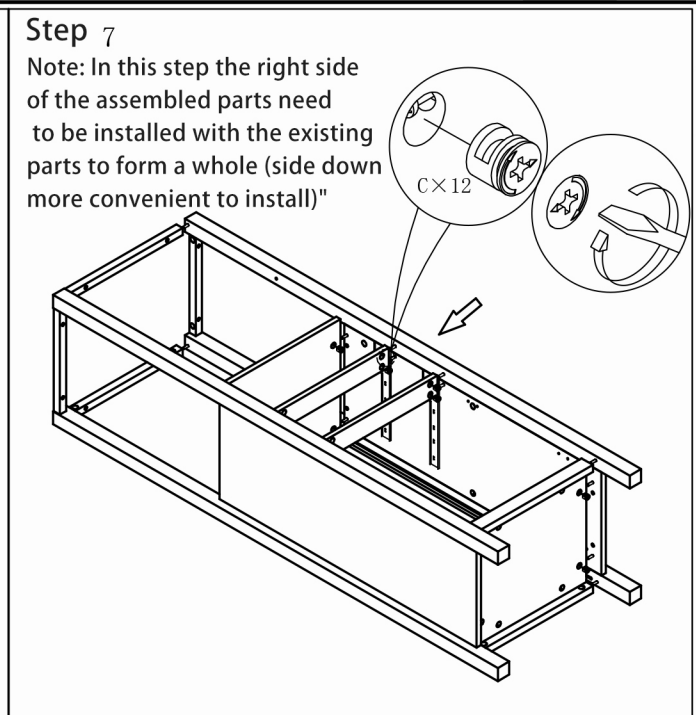


① End Panel  1×	② Top drawer bar1 (Long)  2×	③ Top drawer bar2 (Short)  2×	④ left side panel  1×	A. Dowel  16×	B. Cam Pin  52×
⑤ right side panel  1×	⑥ Panel  1×	⑦ Panel  1×	⑧ Modesty Panel  1×	C. Cam Latch  52×	D. Cam Cover  52×
⑨ Drawer front panel  2×	⑩ Drawer right side panel  2×	⑫ Drawer back panel  2×	⑬ Drawer bottom panel  2×	E. Long pitch self-tapping screw(Black)  8×	F. Wood screw  14+1×
⑭ Brace  2×	⑪ Drawer left side panel  2×	⑯ door panels  1×	⑰ Solid wood leg (Left front)  1×	G. Wood screw  8×	H. Full overlay hinge  2×
⑱ Solid wood leg (Right front)  1×	⑲ Solid wood leg (Right rear)  1×	⑳ Solid wood leg (Left rear)  1×	㉑ Solid wood pull bar (rear)  1×	I. Board support  4×	J. Backboard bracket  8×
			㉒ Solid wood pull bar (Front)  1×	K. Anti-pour hardware package  2×	L. Handle  3×
				Model PS702-0415	
				Size 480W*400D*1590H	

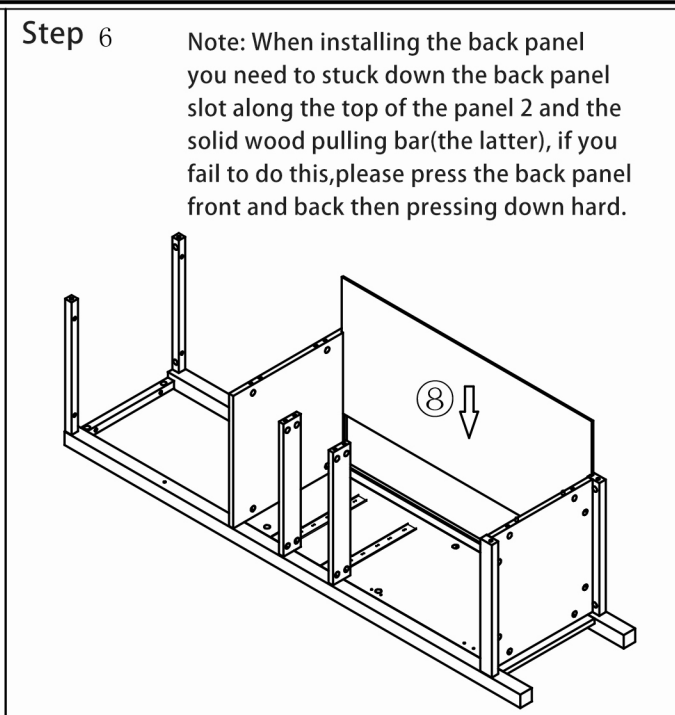

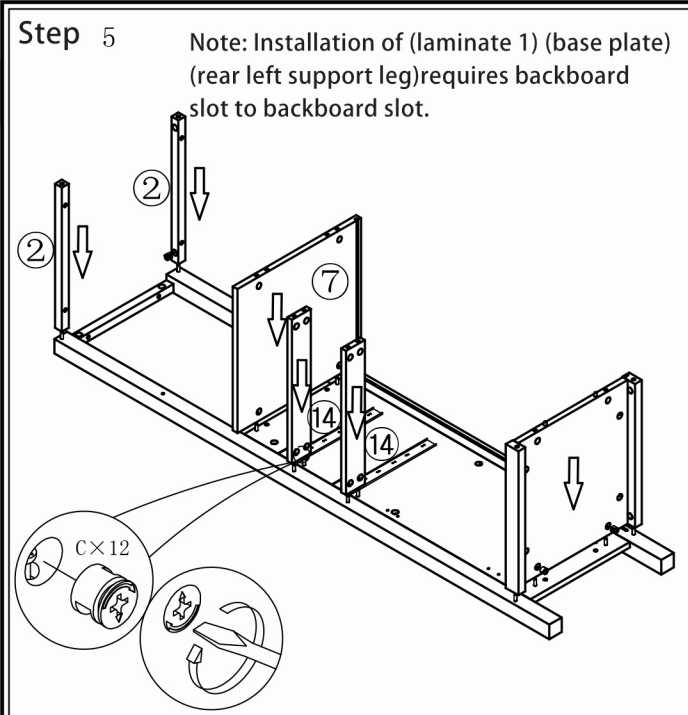


Step 11 Note: This is the installation method of one of the drawers, the other drawer installation method is the same, after installing the drawer put all the latches on the place of the cover stickers.

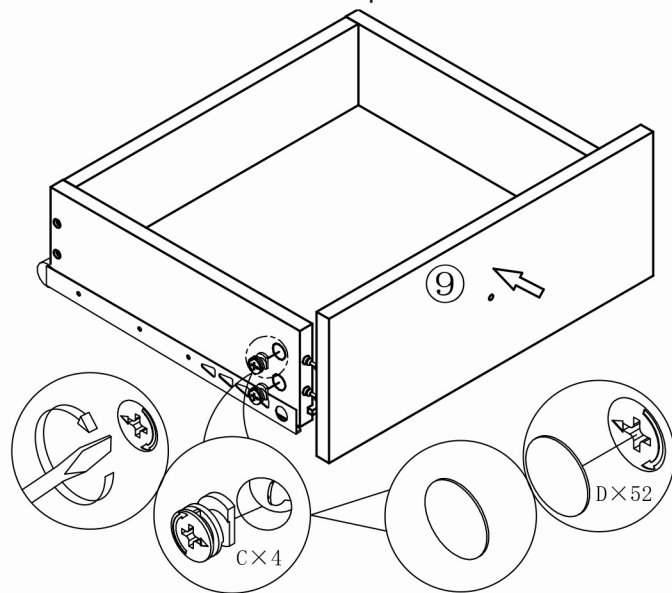


Step 12

Note: After the drawers are installed, first hold up the cabinet, and then put the drawers in (do not push all the way in at once)

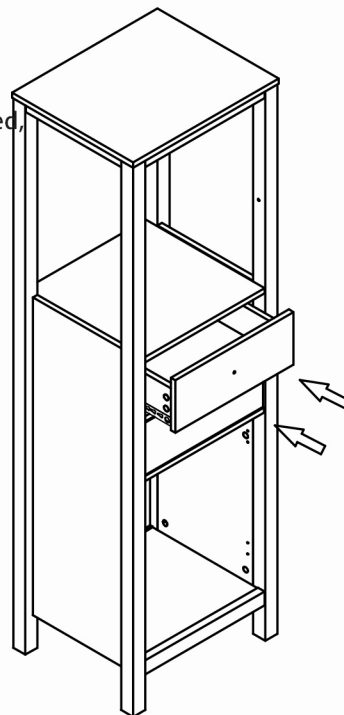


Step 13

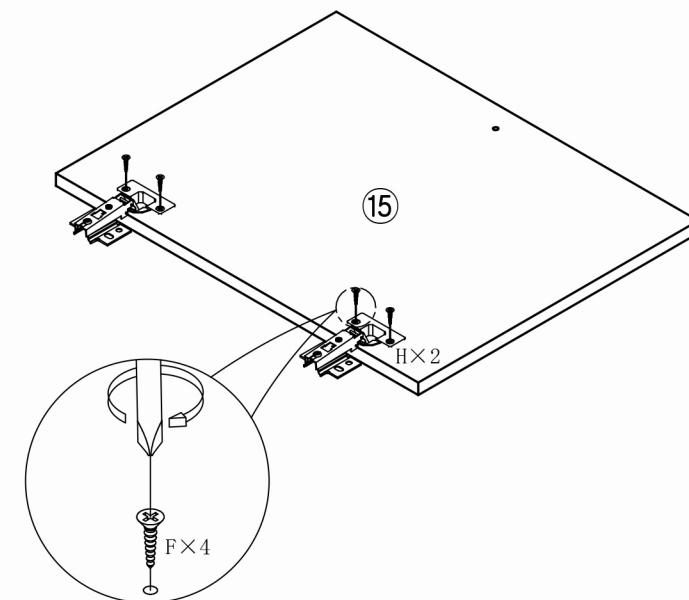


Step 14

Note: The position of the front and rear of the installation (seven buckles) needs to be determined according to the distance between the door panels together, and the position of the top and bottom according to the picture


Note: This door panel can be installed left and right, this is the installation of the right side of the panel steps.

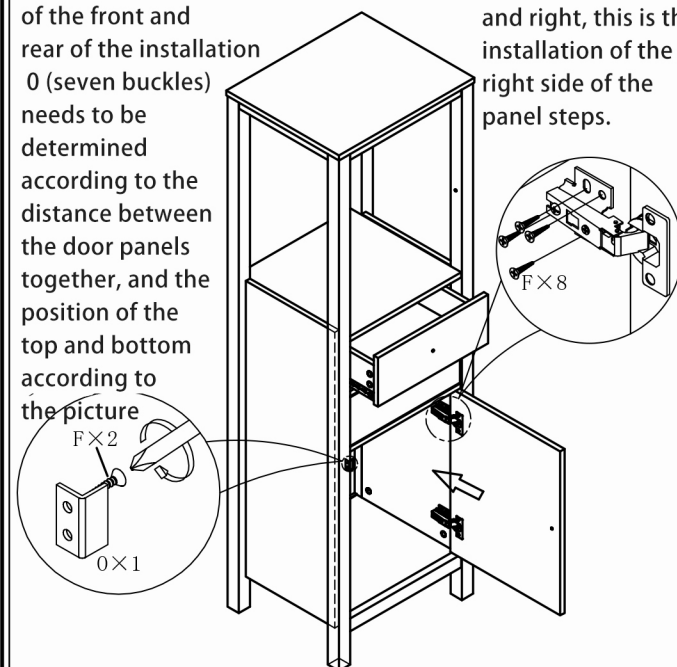

Step 15

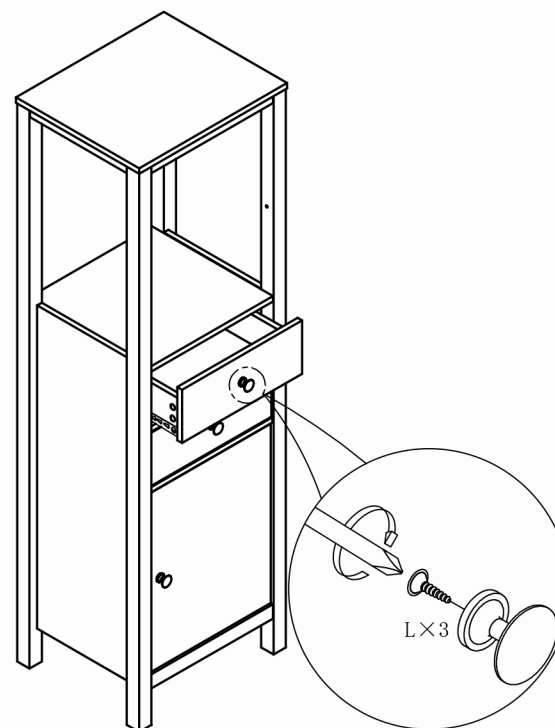


Step 16

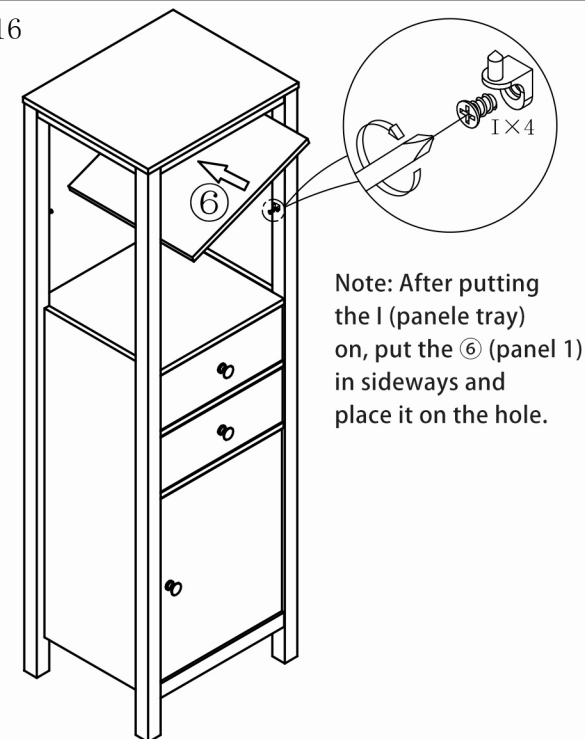


Note: After putting the I (panel tray) on, put the ⑥ (panel 1) in sideways and place it on the hole.

Step 11

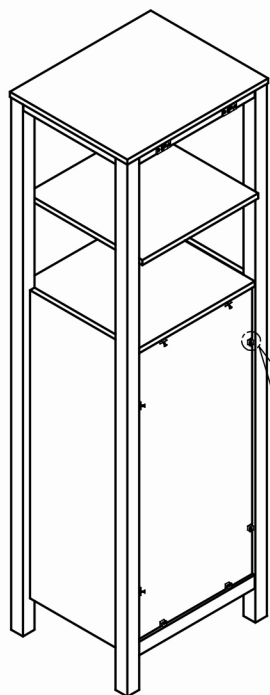


Note: The installation method of the back panel bracket can be installed by referring to the position on the picture.

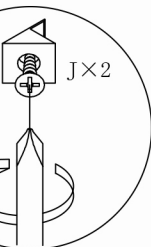


Step 12

Open K (anti-pour hardware package)
2X (the following is the number of single package)

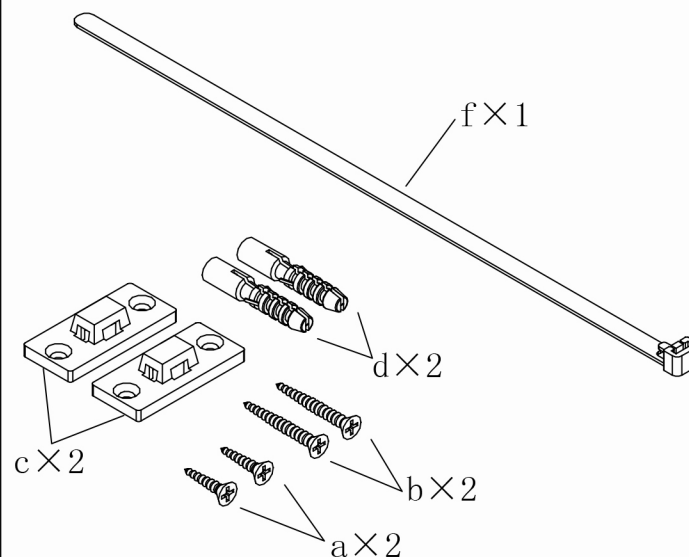

Step 13

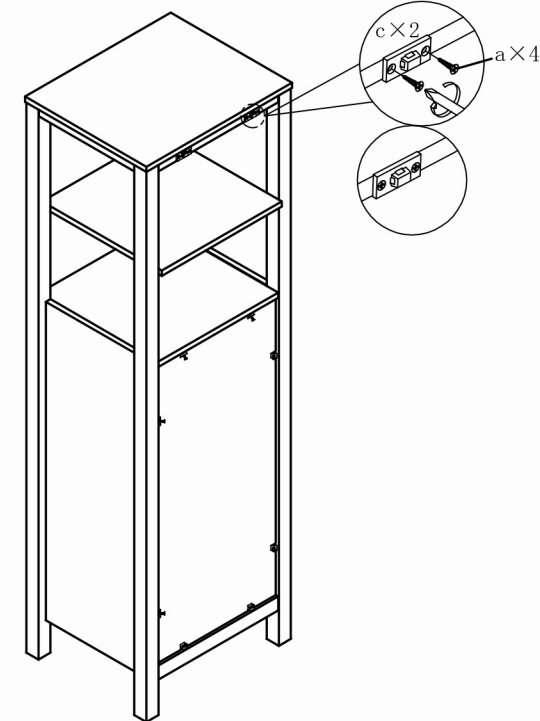


Step 14

Note: Drill holes in the wall corresponding to the position of e on the top panel and tap into the d x 4, then screw into the b x 4



Step 15

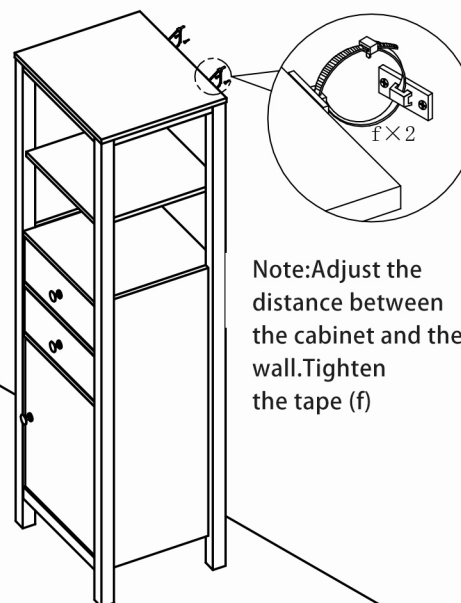

Note: put f (x2) through the c (x2)

Note: Adjust the distance between the cabinet and the wall. Tighten the tape (f)

Step 16

