
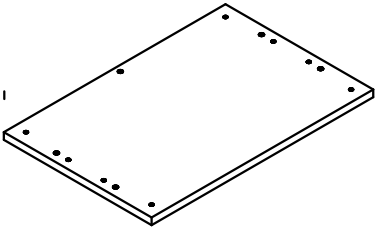
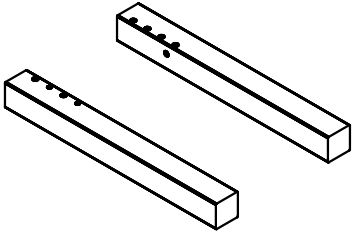
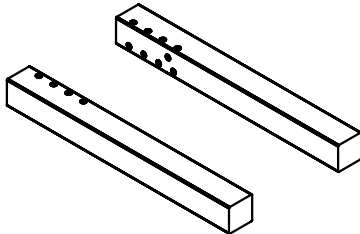







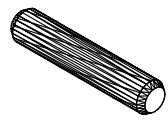
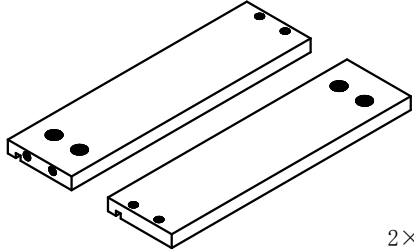
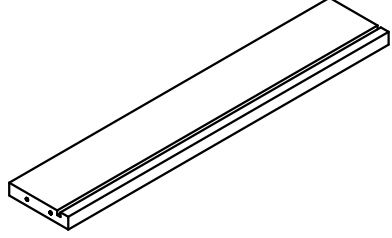
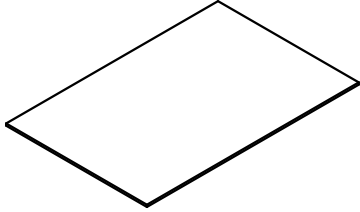
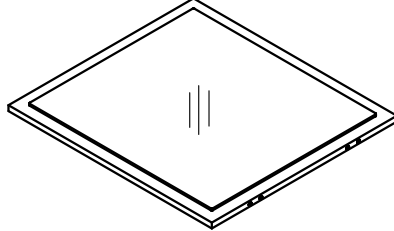
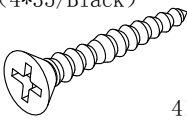
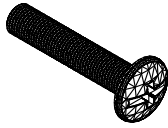
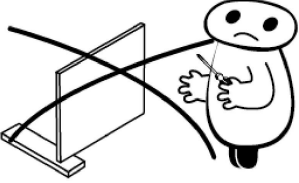
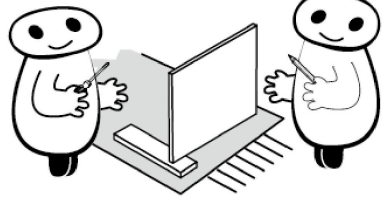


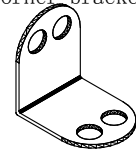
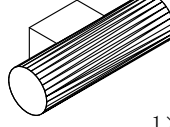
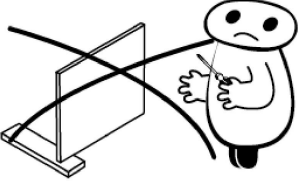
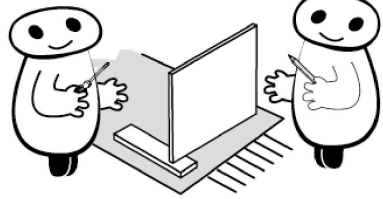

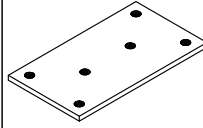


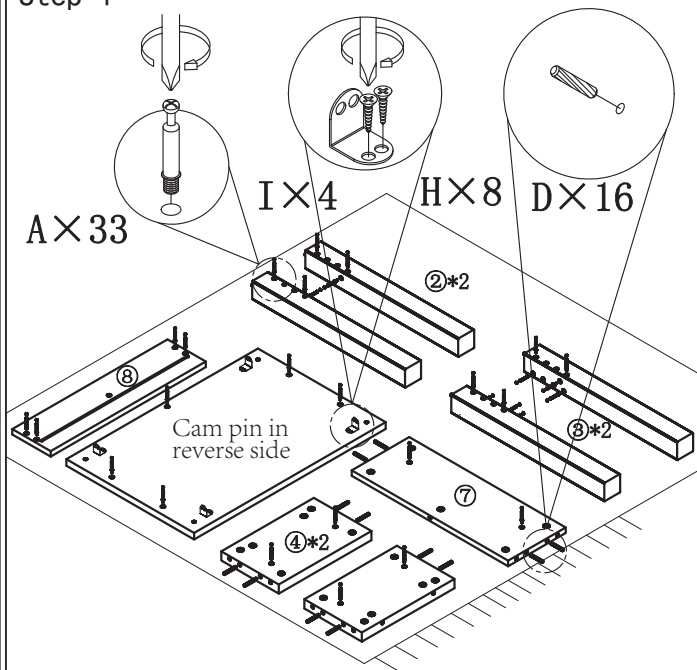
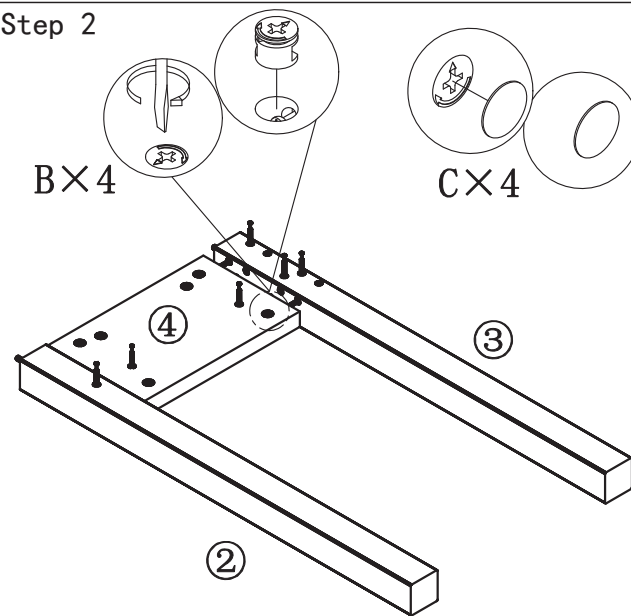


| | | | | | |
|--|--|---|--|--|--|
| ①Desk top panel  1× | ②Solid wood leg 1  2× | ③Solid wood leg 2  2× | ④Left and right side panels  2× | A. Cam pin  33+1× | B. Cam Lock  33+1× |
| ⑤Brace 1  1× | ⑥Brace 2  1× | ⑦Modesty panel  1× | ⑧Drawer front panel  1× | C. Cam Cover  33× | D. Dowel  18× |
| ⑨Drawer left and right side panel  2× | ⑩Drawer back panel  1× | ⑪Drawer bottom panel  1× | ⑫Mirror plate  1× | E. Long pitch self-tapping screw (4*35/Black)  4× | F. Puller screw  1× |
| <div> <div>  </div> <div> <p>Install by 2 persons</p>  </div> </div> | | | | G. Telescopic screwdriver  1× | H. Japanese-made nails (3.5*14/color zinc)  24+2× |
| | | | | I. Corner bracket  4× | J. T-shape pull handle  1× |
| <div> <div>  </div> <div> <p>Install by 2 persons</p>  </div> </div> | | | | K. Wood screw (3*15/color zinc)  6× | L. Flat bracket  2× |
| | | | | N. Outside rail  2× | M. Self-adhesive mat  4× |
| | | | | Model | GF106-0613 |
| | | | | Name | Dresser table |
| | | | | Size | 600W*400D*1350H |

Step 1

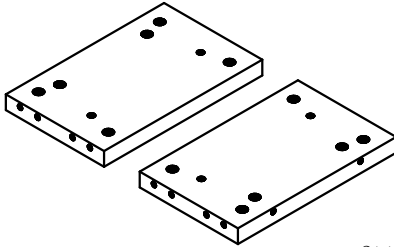


Step 2

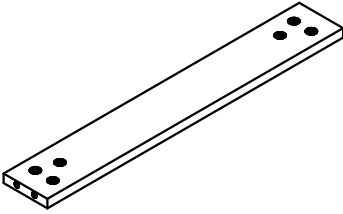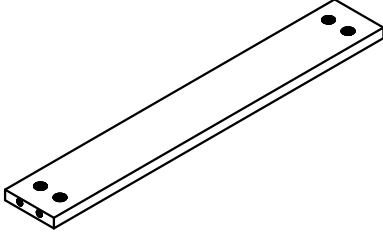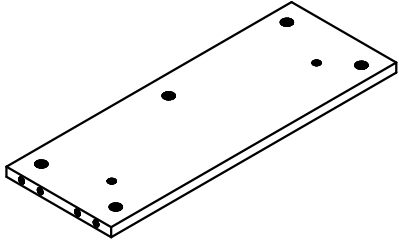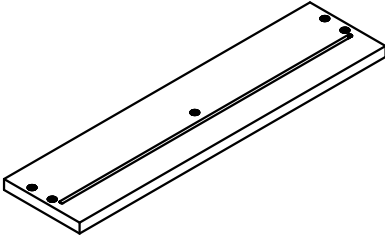


Note: installation of two sets, one set each on the left and right


Step 3

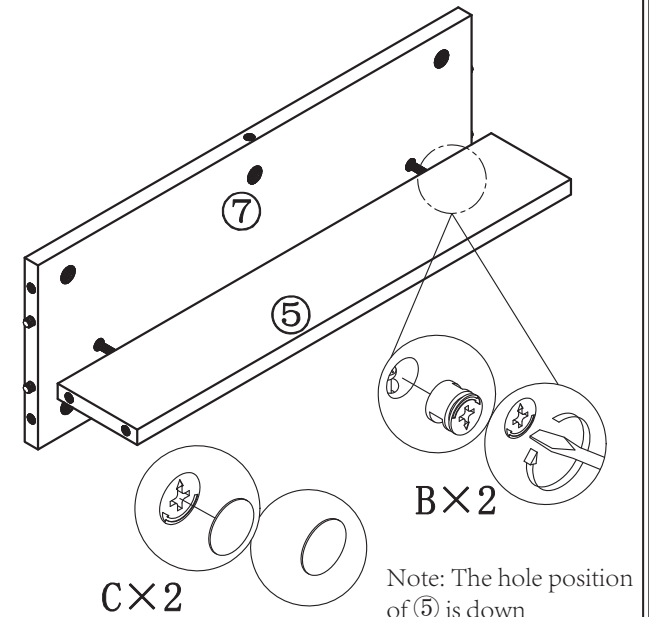


Step 4

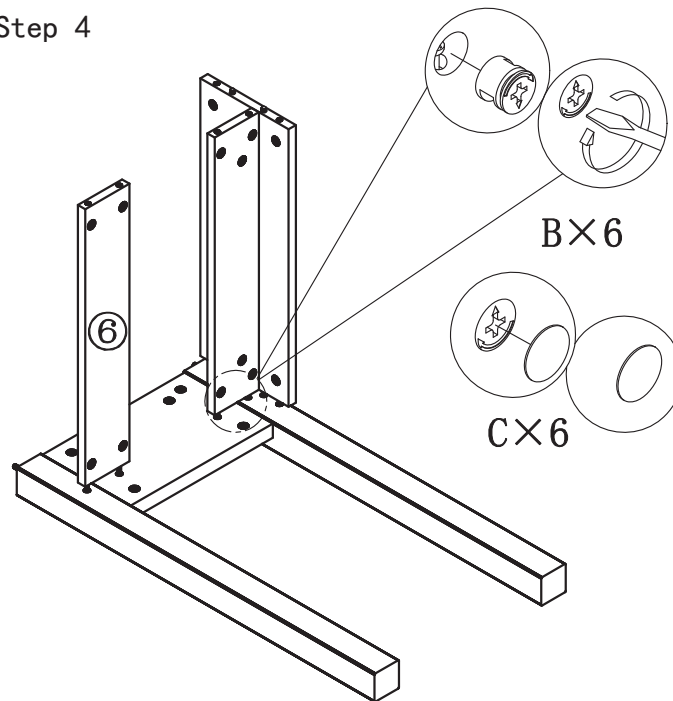


Step 5

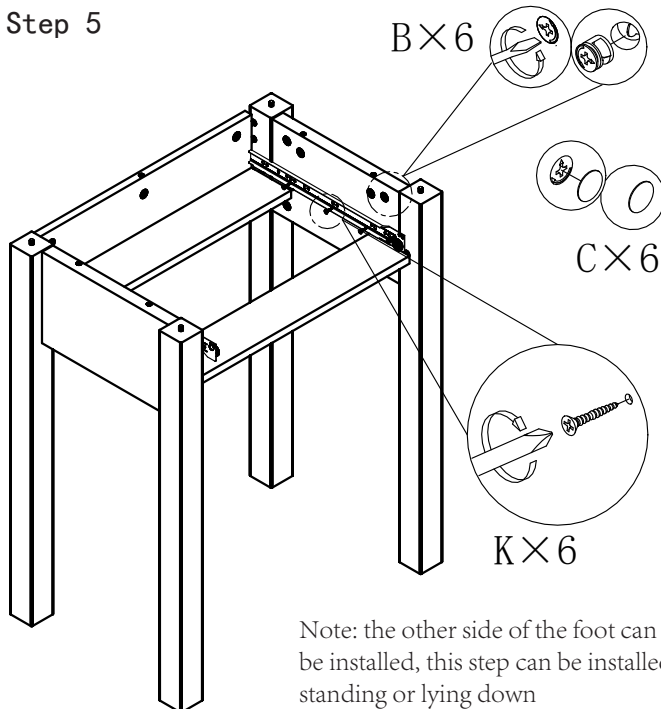


Step 6

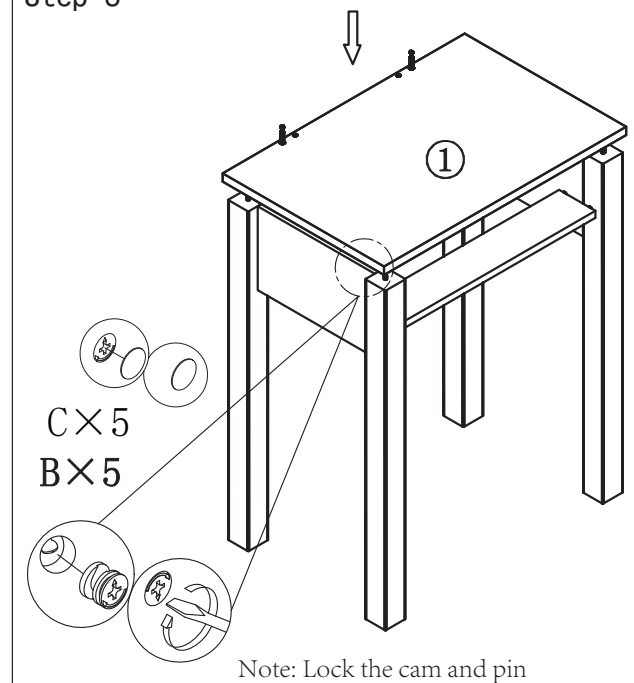


Step 7

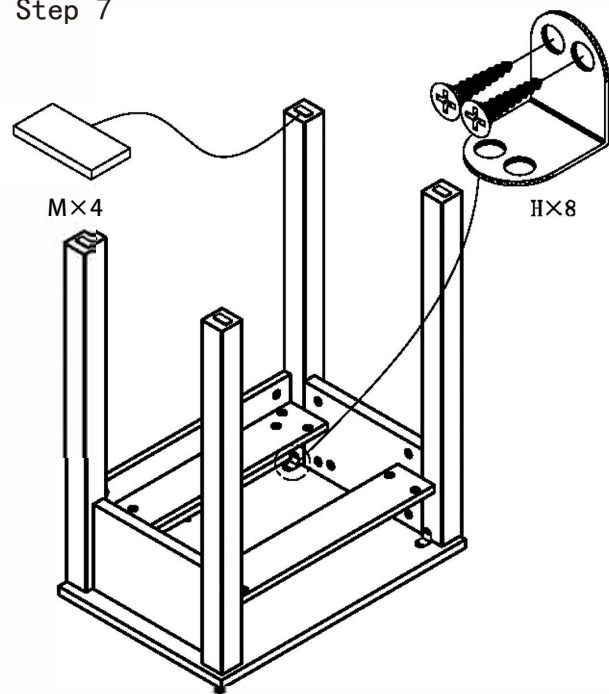


Step 8

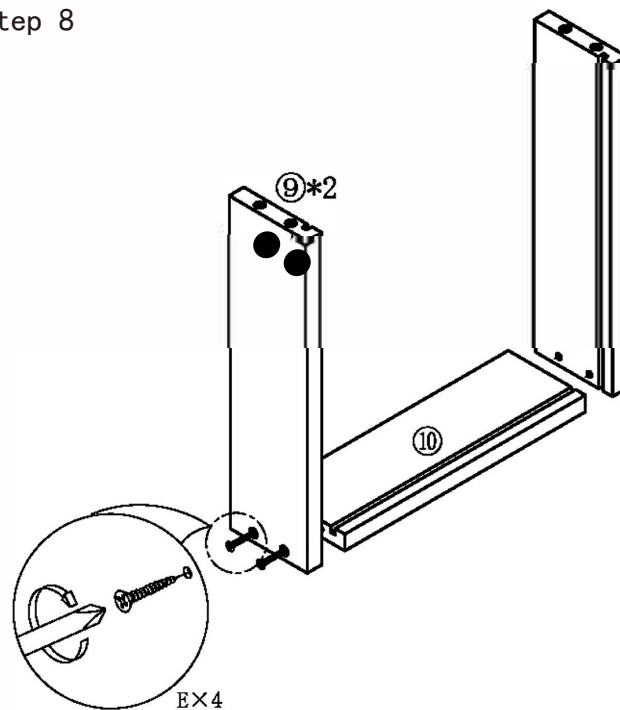


Step 9

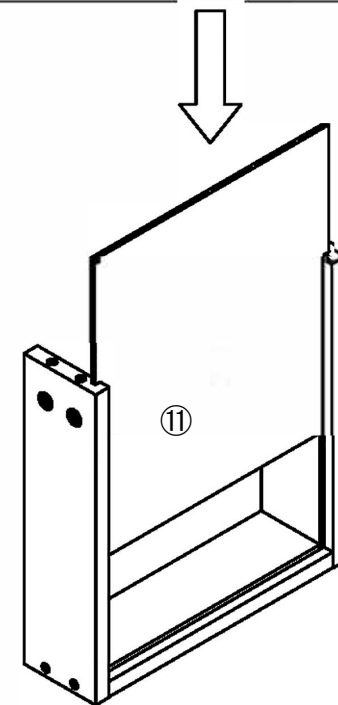


Step 10

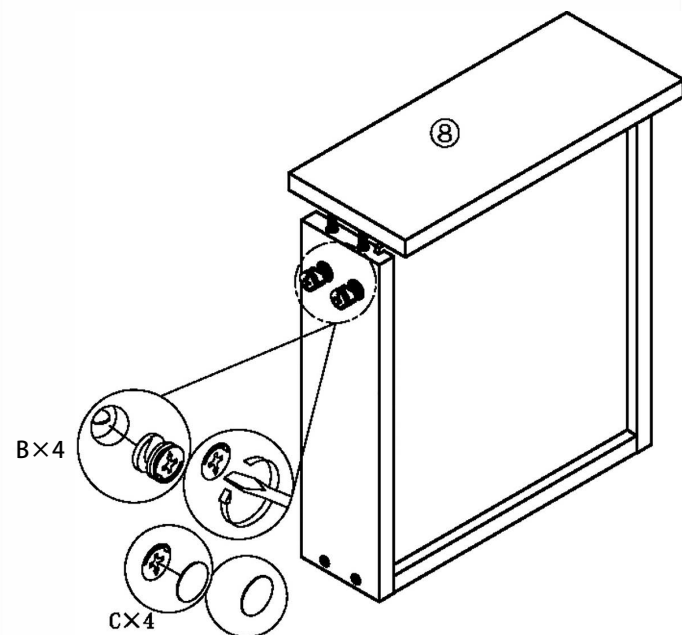

Step 11

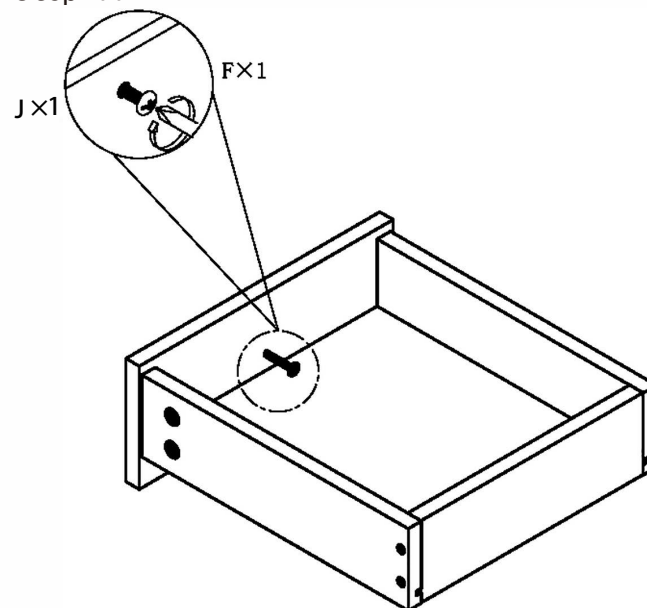


Step 12

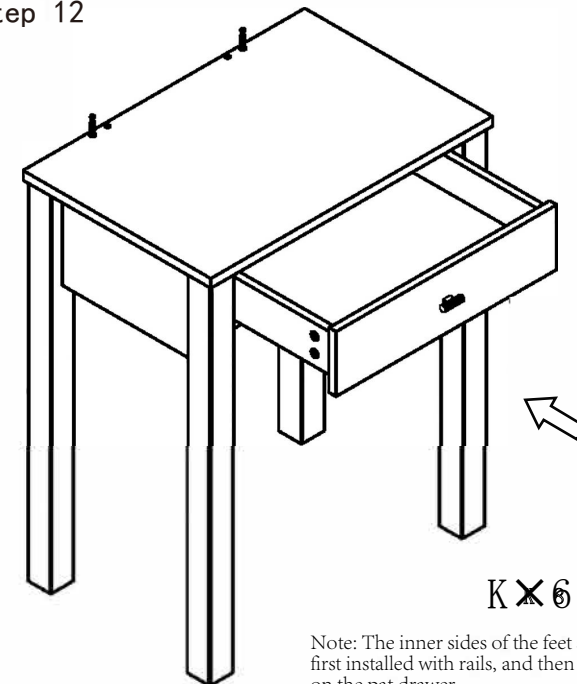


Note: The inner sides of the feet are first installed with rails, and then put on the pat drawer.

Step 13

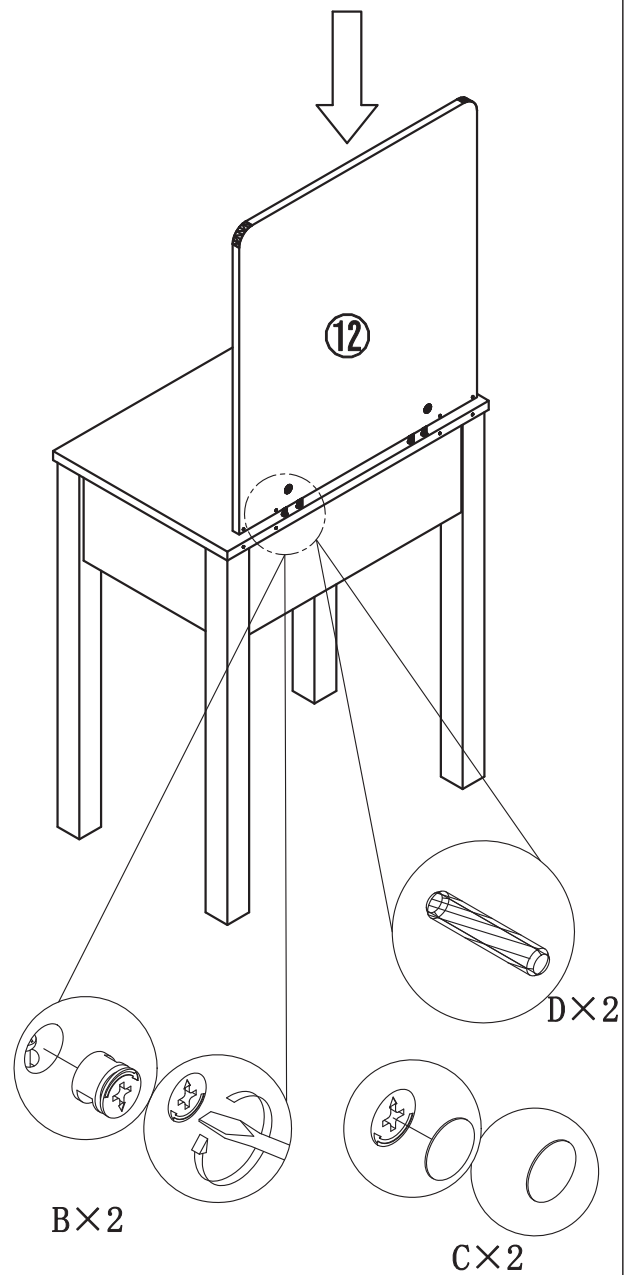

Step 14

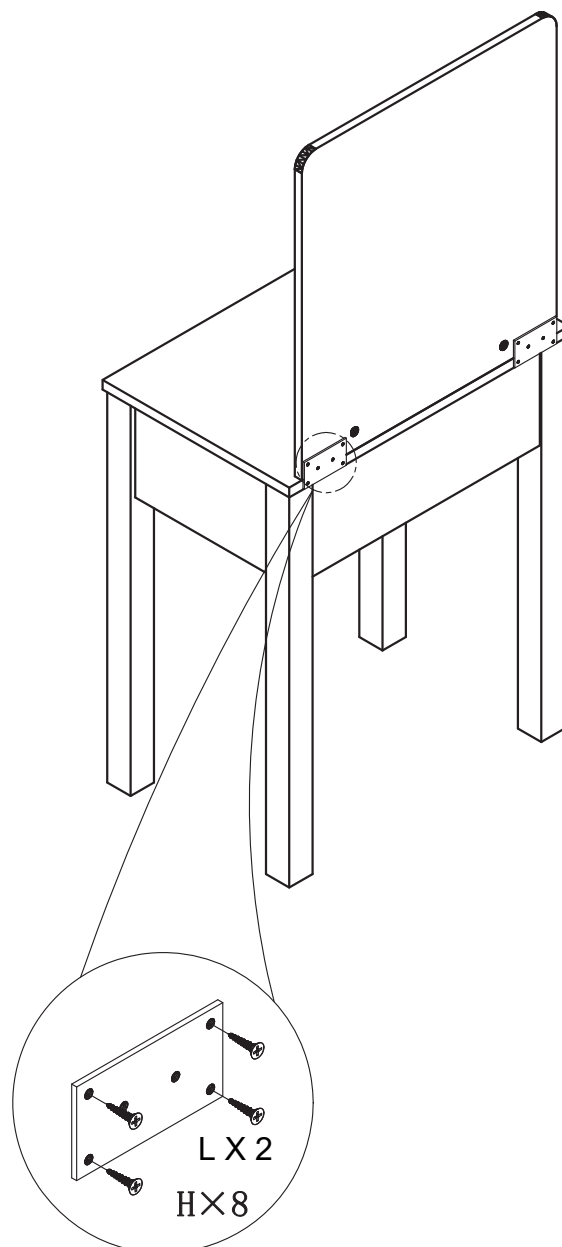

Step 15

