


# LINSY 林氏家居

## 安装示意图/Assembly

如何区分沙发的左右方向?  
How to distinguish the left and right directions of the sofa?



安装人数  
Installer  
安装工具  
Use tools

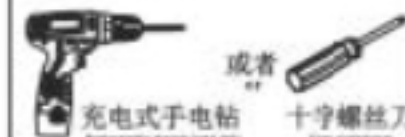

2-1

产品名称 Model NO. TBS606

产品规格 Specification 1.55m or 1.85m or 2.15m

尺寸组合 Combined size 1550(1850/2150)\*870\*1000

| 成品部件<br>明细<br>Details of finished parts | 编号<br>No. | 名称<br>Name             | 部件尺寸<br>Component dimensions  | 数量<br>Quantity |
|---|-----------|------------------------|---|----------------|
|   | 1         | 左扶手<br>Left armrest    | 科技布+木方+海绵+五金配件+夹板<br>Tech fabric + wood + sponge + hardware + board         | 1              |
|   | 2         | 右扶手<br>Right armrest   | 科技布+木方+夹板+海绵+实木配件<br>Tech fabric + wood + board + sponge + solid wood parts | 1              |
|   | 3         | 铁架<br>Iron frame       | 五金<br>Hardware  | 1              |
|   | 4         | 靠背<br>Backrest         | 五金+科技布<br>Hardware + Tech fabric  | 1              |
|   | 5         | 挡板<br>Baffle           | 科技布+夹板+海绵<br>Tech fabric + board + sponge                                   | 1              |
|   | 6         | 大号垫子<br>Large cushion  | 海绵+科技布<br>Sponge + Tech fabric  | 1              |
|   | 7         | 中号垫子<br>Medium cushion | 海绵+科技布<br>Sponge + Tech fabric  | 1              |
|   | 8         | 小号垫子<br>Small cushion  | 海绵+科技布<br>Sponge + Tech fabric  | 1              |
|   | 9         | 靠枕<br>Pillow           | 科技布+白布枕芯<br>Tech fabric + white pillow core                                 | 2              |
|   | 10        |                        |   |                |
| 11                                      |           |                        |   |                |

制图 Drafting C20

### 配件表1 Accessories list 1

| 编号<br>No. | 名称<br>Name                                      | 图示<br>Image | 总数<br>Total |
|-----------|---|-------------|-------------|
| A         | 说明书(含安装图)<br>Mounting instruction(with drawing) |             | 1           |
| B         | 斜边内六角螺杆-M8*45<br>M8*45 bevel cross bolt         |             | 14          |
| C         | M8垫片<br>M8 pad                                  |             | 12          |
| D         | M5*45白攻螺丝<br>M5*45 self tapping screw           |             | 3           |
| E         | 5mm内六角扳手<br>5mm internal hexagonal wrench       |             | 1           |
| F         |   |             |             |
| G         |   |             |             |
| H         |   |             |             |
| I         |   |             |             |
| J         |   |             |             |

## 双人 Double

STEP 1:

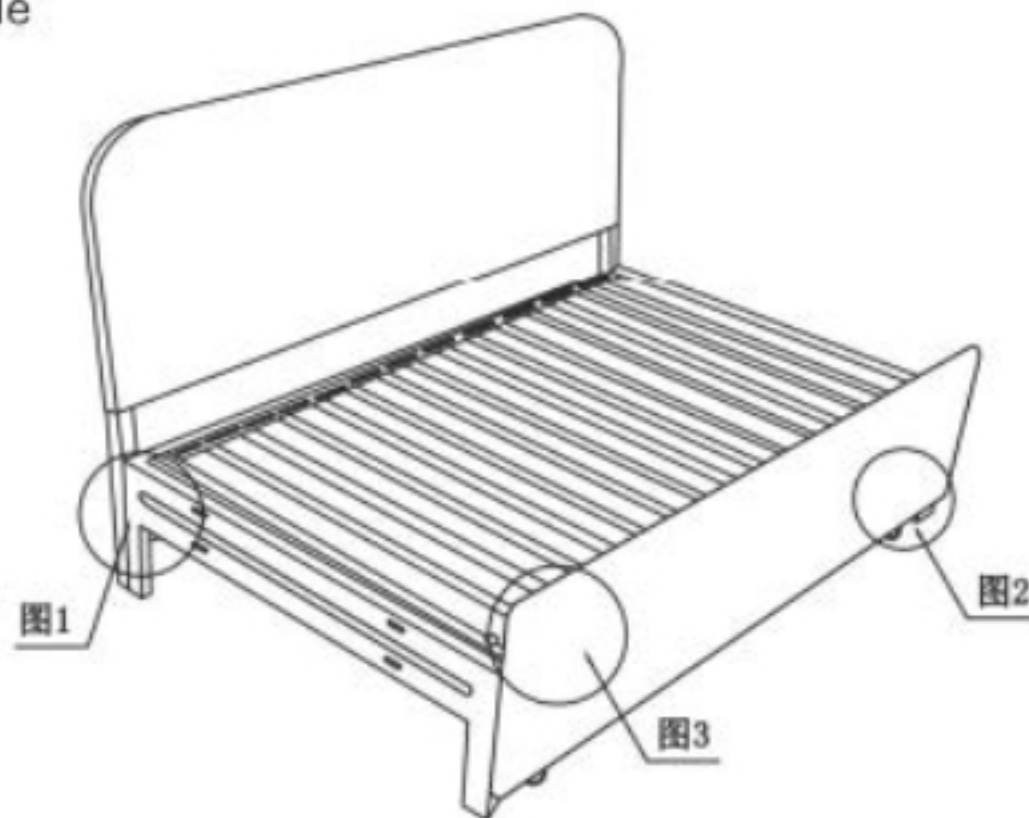


图1:靠背和铁架安装示意图  
Figure 1: installation diagram of backrest and iron frame

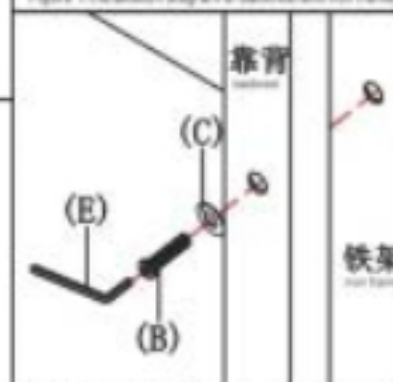


图2:前挡板和铁架安装示意图(1)  
Figure 2: installation diagram of front baffle and iron frame (1)

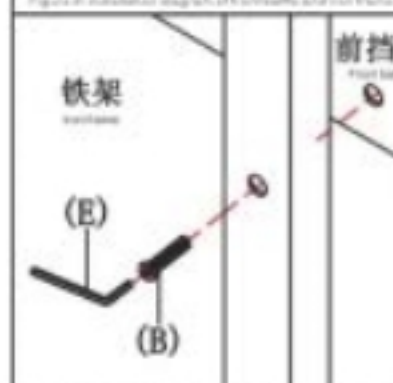
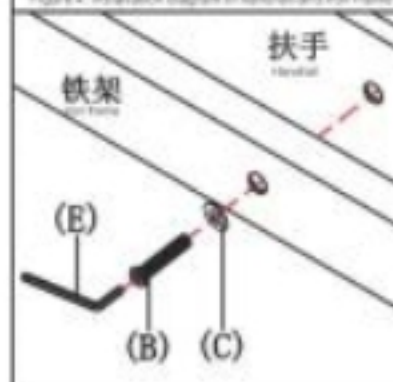


图3:前挡板和铁架安装示意图(2)  
Figure 3: installation diagram of front baffle and iron frame (2)

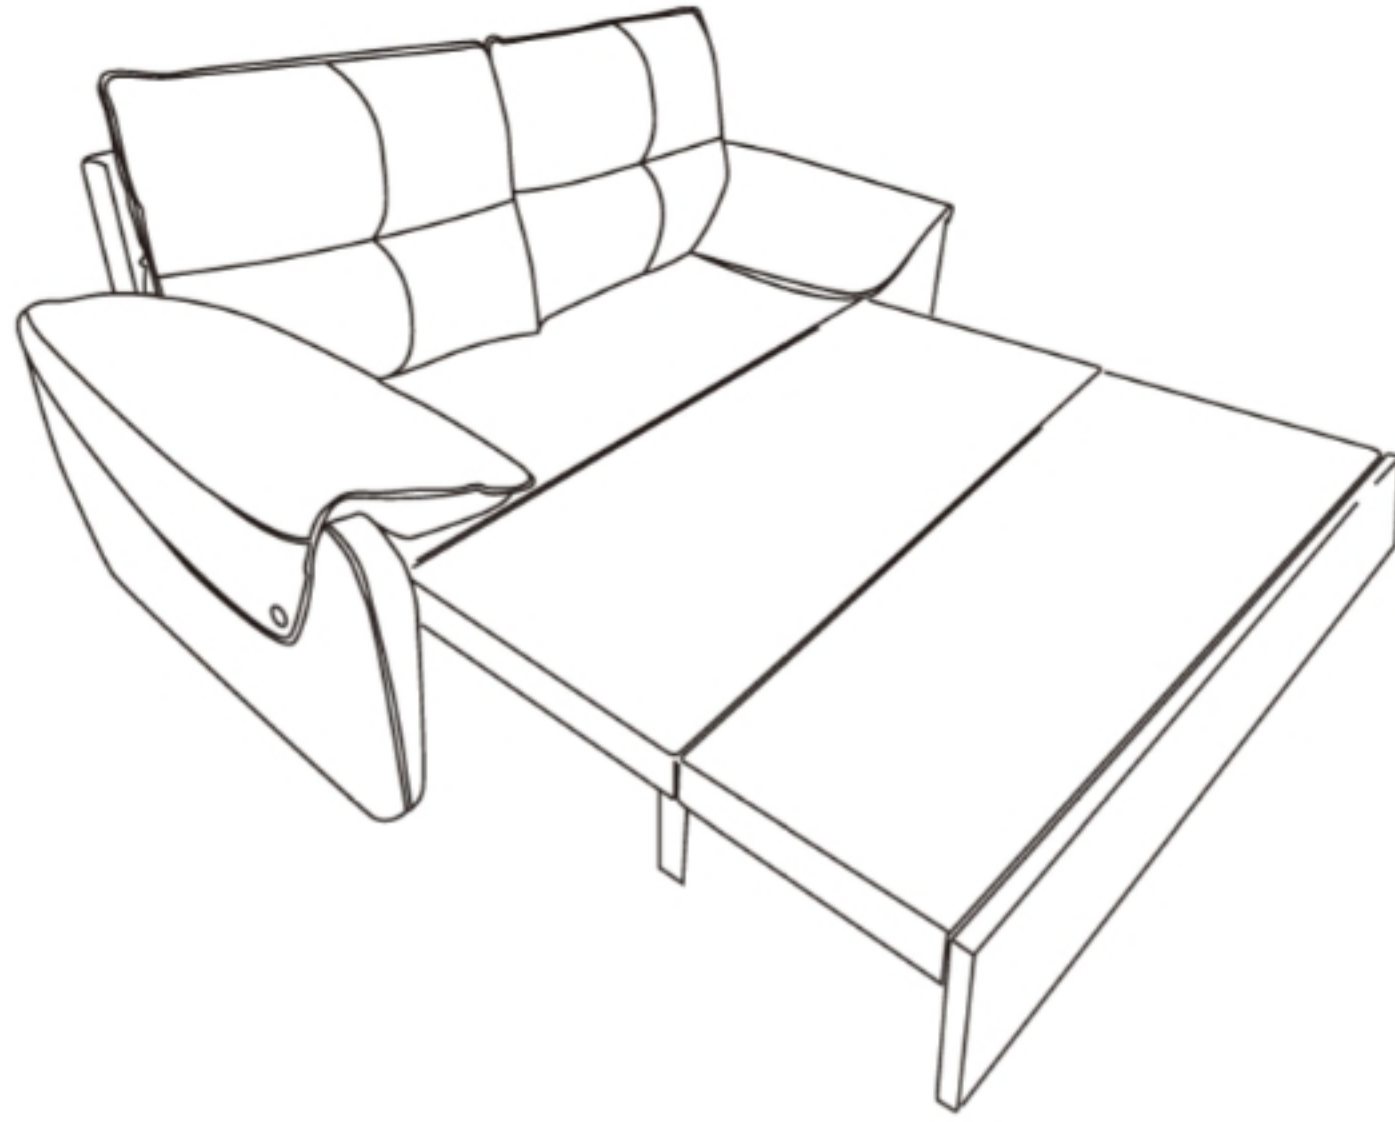


图4:扶手和铁架安装示意图  
Figure 4: installation diagram of armrest and iron frame



STEP 2:



**安装提示:**

- 1、先拿开垫子拉出铁架。
- 2、将垫子铺上铁架上。

**Installation Tips:**

1. First take away the mat and pull out the iron frame.
2. Put the mat on the iron frame.

**组合图 双人**

Combination diagram

Double

