


LINSY 林氏家居

五金表/Hardware list

部件表/Parts List

安装示意图/Assembly Instruction

产品名称 Model NO.	BY001-A
产品规格 Specification	637*630*1120-1190
安装工具 Tool	安装人数 Installer



(A)*1

内六角扳手
Wrench



(B)*4

内外六角螺丝8*20
Inner and outer
hexagon screws8*20



(C)*4

平头内六角螺丝8*35
Flat head hexagon
socket screw8*35




(D)*4

沉头内六角螺丝6*20(镀锌)
Countersunk head
hexagon socket screw
(Galvanized)6*20



(E)*5

50PA椅轮
50PA Castor



(F)*1

三级气压棒
Three stage
pneumatic rod



第一步: 扫码自动跳转林氏公众号页面

第二步: 下拉页面至安装视频位置

Step 1: Scan the code to automatically jump to
Lin's official account page

Step 2: Drop down page to install video location




编号NO.	名称Name	规格 Specification	数量QTY	材质Material
①	靠背 Backrest		1	PP+玻纤 PP+Glass fiber
②	座垫 Cushion		1	海绵 Chair foot
③	托盘 Tray		1	铁 Iron
④	椅脚 Chair foot		1	PA+玻纤 PA+Glass fiber
⑤	右扶手 Armrest (R)		1	PP+玻纤 PP+Glass fiber
⑥	左扶手 Armrest (L)		1	PP+玻纤 PP+Glass fiber

BY001-A


安装方法/ Installation method

STEP 1

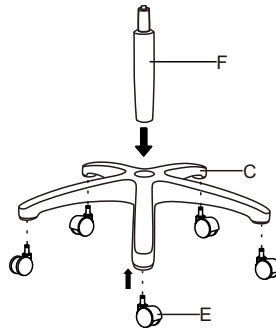


把脚轮分别装入椅脚的五个脚孔，再将气压棒装入椅脚的中心孔
Install the casters into the five foot holes of the chair feet, and then install the air pressure rod into the center hole of the chair feet

STEP 2

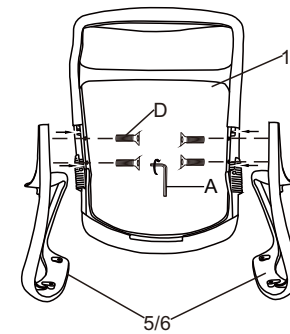


如图将扶手上端与靠背互相卡入后，依次锁上四颗靠背螺丝D
After the upper end of the armrest and the backrest are clamped into each other as shown in the figure, lock four backrest screws D in turn

STEP 3

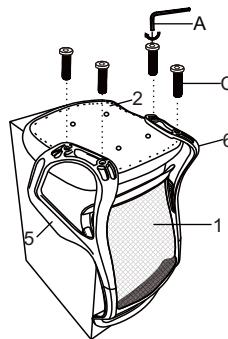

如图将坐垫倒放在纸箱上或桌上，把组装好的椅背扶手安装到坐垫上并锁上四颗扶手螺丝C
As shown in the figure, put the cushion upside down on the carton or table, install the assembled armrest on the cushion and lock the four armrest screws C

STEP 4

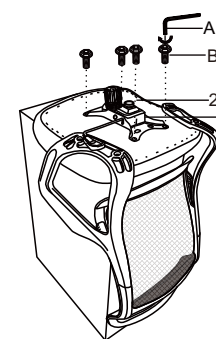

如图安装底盘，依次将四颗底盘螺丝B全部锁入后用扳手加固锁紧
Install the chassis as shown in the figure, lock all four chassis screws B in sequence, and then use a wrench to reinforce and lock them

STEP 5



注意：先锁上座后的两颗螺丝，再锁入座前的两颗螺丝，螺丝务必锁紧以防止扶手晃动
Note: lock 2 screws on the rear seat, then lock 2 on the front seat. All screws must be locked tight to prevent the handrail from shaking

STEP 6

